


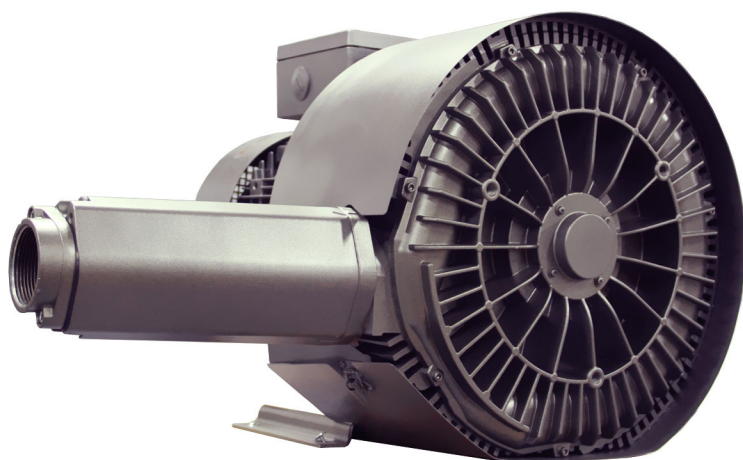

**HRC/4RC-SERIES  
REGENERATIVE BLOWER  
Installation &  
Operating Instructions**

OM011 Rev.B



# Republic Regenerative Blowers

## HRC100-HRC1502 • 4RC210-4RC630

### Installation Instructions & Operating Manual


Republic Manufacturing®  
5131 Cash Road  
Dallas, TX 75247  
(214) 631-8070  
[www.republic-mfg.com](http://www.republic-mfg.com)  
[info@republic-mfg.com](mailto:info@republic-mfg.com)

### Warning

 Service procedures beyond the scope of this manual should only be performed by trained service personnel at Republic Manufacturing.

### Important

Read the following safety instructions carefully. Disconnect blower from electrical source using an approved lockout/tagout procedure before attempting service

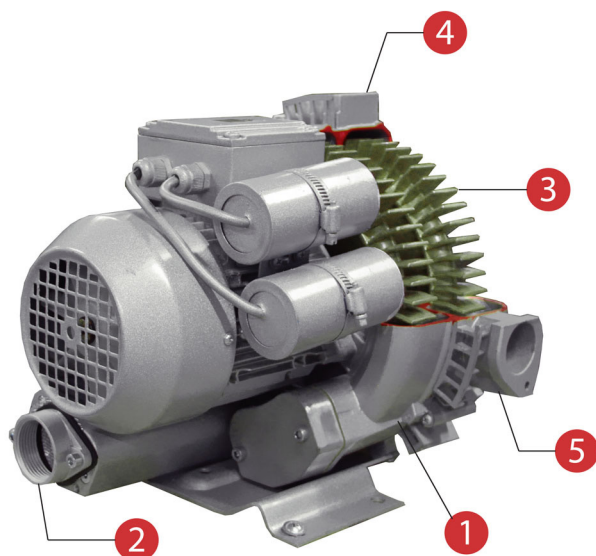

1. Side channel
2. Air inlet
3. Impeller
4. Impeller chamber
5. Exhaust outlet

### Working Principle

Air or gas is pulled into a side channel (1) through the air inlet (2) and is accelerated by an impeller (3) rotating inside the impeller chamber (4). The resulting pressurized air or gas is discharged through the exhaust outlet (5). This type of operation is also known as a ring blower design.

## Table of Contents

|                                                      |    |
|------------------------------------------------------|----|
| Safety Instructions .....                            | 5  |
| Lockout/Tagout Procedures .....                      | 6  |
| Blower Description & Model Identification .....      | 6  |
| Equipment Arrival & Inspection.....                  | 6  |
| Storage Conditions .....                             | 7  |
| Suitability & Environmental Conditions.....          | 7  |
| Space Required for Installation.....                 | 7  |
| Intended Use.....                                    | 8  |
| This operating manual.....                           | 8  |
| The HRC100-1502 & 4RC210-630 .....                   | 8  |
| Foreseeable Misuse .....                             | 8  |
| Technical Data.....                                  | 9  |
| Tightening Torques for Screw Connections.....        | 10 |
| Installation .....                                   | 11 |
| Plumbing & Accessories.....                          | 11 |
| Typical Pressure Layout.....                         | 12 |
| Typical Vacuum Layout .....                          | 12 |
| Electrical Connection.....                           | 13 |
| Wiring Diagram - Single Phase .....                  | 14 |
| Wiring Diagram - Three Phase.....                    | 14 |
| Commissioning.....                                   | 15 |
| Preparation.....                                     | 15 |
| Start-Up .....                                       | 15 |
| Shut-Down.....                                       | 15 |
| Operation .....                                      | 16 |
| Shut-Down & Longer Standstills.....                  | 16 |
| Servicing .....                                      | 16 |
| Emptying/Rinsing/Cleaning.....                       | 16 |
| Preventative Maintenance.....                        | 16 |
| Troubleshooting .....                                | 17 |
| In the Event of a Breakdown .....                    | 18 |
| When to Ship the Blower Back to Republic.....        | 18 |
| Disabling, Dismantling, and Scrapping of Blower..... | 18 |
| Warranty Terms and Conditions.....                   | 18 |
| Exploded View .....                                  | 19 |
| 4RC-210.....                                         | 20 |
| 4RC-310.....                                         | 21 |
| 4RC-410.....                                         | 22 |
| 4RC-510.....                                         | 23 |
| 4RC-610.....                                         | 24 |



|                                                                      |    |
|----------------------------------------------------------------------|----|
| HRC-025/025-1 .....                                                  | 25 |
| HRC-100/101.....                                                     | 26 |
| HRC-200/201.....                                                     | 27 |
| HRC-300/301/400/401 .....                                            | 28 |
| HRC-500/501/600/700 .....                                            | 29 |
| HRC-750/800/900/1000 .....                                           | 30 |
| HRC-1020/1040/1060.....                                              | 31 |
| HRC-1100/1200/1300.....                                              | 32 |
| Republic Regenerative Blower Exploded View Double Stage Blowers..... | 33 |
| 4RC-220.....                                                         | 34 |
| 4RC-320.....                                                         | 35 |
| 4RC-420.....                                                         | 36 |
| 4RC-520.....                                                         | 37 |
| 4RC-620.....                                                         | 38 |
| 4RC-430.....                                                         | 39 |
| HRC-202/202-1 .....                                                  | 40 |
| HRC-302/302-1 .....                                                  | 41 |
| HRC-402S/402/402-1 .....                                             | 42 |
| HRC-502/602/702.....                                                 | 43 |
| HRC-802/902/1002.....                                                | 44 |
| HRC-1102/1202 .....                                                  | 45 |
| HRC-1203/1402/1452/1502.....                                         | 46 |

## Safety Instructions

To insure safe operation, we have provided many important safety guidelines in this manual for the Republic Regenerative Blower. Please read this manual carefully and pay particular attention to instructions with the following signs:

**DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

1. Always use qualified electrical and mechanical personnel for installation and maintenance of Republic Blowers and motors.



2. Disconnect the electrical power at the motor starter, fuse box or circuit breaker before working on the system. Take special precautions to make sure the power cannot be turned on while you are working on the blower. **Use an approved lockout/tagout system.**

3. Make sure the motor is electrically grounded, the mounting bolts are properly secured, and all guards are in place before start-up.



4. Wear safety glasses and earplugs when working on the blower or components within a Republic Blower system.

5. **Check the final installation for proper amp loads.**

6. Keep all tools, loose clothing and hands away from rotating or moving parts while the unit is running.

7. Inspect the blower at regular intervals for damaged or worn parts. **Replace damaged parts immediately! Do not connect or turn on a damaged blower!**

8. Inspect the inlet air filter at regular intervals and replace when necessary. A dirty air filter can cause improper blower performance.

9. Use only genuine Republic Manufacturing brand replacement parts.

10. Refer to Troubleshooting section of manual.

11. Make sure to install the inlet air filter or piping to blower inlet before starting the blower/motor.

12. Water, other liquids, aggressive or inflammable gases and vapors may not be handled. Handling of inflammable or aggressive gases and vapors is only possible with special versions.

13. Improper use of the unit can result in serious or even fatal injuries. Only operate the blower for the purposes indicated under "Intended Use", with the fluids indicated under "Intended Use" and with the values indicated under "Technical Data".



14. High temperatures of up to approximately 320°F (160°C) can occur on the surface of the blower. Allow to cool down after shut-down.





## Lockout/Tagout Procedures



1. Notify all affected employees that a lockout or tagout is about to occur on a specific piece of equipment or machinery. The authorized employee to use the lockout/tagout system shall know the type and magnitude of energy that the machine or equipment utilizes and the hazards that exist with the energy source before preparing to shutdown.
2. If the machine or equipment is operating, please use normal stopping or rundown procedures for that machine.
3. Operate the switch, valve, or other energy isolating devices so that the equipment is isolated from its energy source. Isolating the equipment from its energy source may involve turning off such items as the operating control, a line valve, or an electrical circuit breaker.
4. Apply the lockout/tagout isolating device with assigned individual locks or tags.
5. Release any potentially-hazardous stored or residual energy. In order to do so, this may mean to return springs to a normal position, or bleeding down. Since the machine must be in a zero energy state, if there is any chance the stored energy may reaccumulate, verification of isolation must be continued until the servicing or maintenance is complete.
6. The machine or equipment is now locked out or tagged out.

## Blower Description & Model Identification

Republic Manufacturing Regenerative Blowers are industrial grade regenerative blowers capable of producing high pressure air at low operating costs. Many models are available within each series:

- ▲ HRC-Series: Standard regenerative blowers with integral motor operating at 50 or 60 Hz, with 3 or 1 phase motor. 0.5-38.9 HP (0.4-29.0 kW) Motor Sizes
- ▲ 4RC-Series: High pressure regenerative blowers with integral motor operating at 50 or 60 Hz, with 3 or 1 phase motor. 0.7-11.5 HP (0.5-8.6 kW)

Republic Blowers have a nameplate containing the serial and model number located on the blower head near the exhaust port. When placing a service call, please provide the Republic serial number. Call us at (800) 847-0380 or e-mail [info@republic-mfg.com](mailto:info@republic-mfg.com).

- ▲ Models come with 1.25 in. (31.8 mm), 2.0 in. (50.8 mm), 2.5 in. (63.5 mm), or 4 in. (101.6 mm) inlet and ports; and can accommodate piping/hose in 1.25 in. (31.8mm), 20 in. (50.8 mm), 2.5 in. (63.5 mm), or 4 in. (101.6 mm) connections.
- ▲ All models can be mounted in a variety of positions. (Please refer to Installation section of manual.)

## Equipment Arrival & Inspection

Inspect the blower system at time of receipt to ensure that all components and accessories, as noted on the packing slip, were received and in good condition. Verify that the serial number on the packing slip matches the serial number shown on the blower head nameplate. Inspect the blower and motor assembly to ensure that the motor horsepower and voltage are correct.

**If any equipment was damaged in transit, you will need to make a claim against the freight carrier immediately.**

If you have any shortages, discrepancies, or damage, please call your Republic Manufacturing Distributor or Republic Manufacturing at (800) 847-0380. No training required.

## Storage Conditions

1. Must store blower in a place that meets the following conditions: clean, dry, and dust-free.
2. The temperature during storage must be between 32 °C (90 °F) and 104 °F (40 °C).

### Long Term Storage

The new blower may initially be stored following delivery.

1. Under advantageous storage conditions (as specified above): 1 year.
2. Under disadvantageous storage conditions (e.g. high humidity, salty air, sandy or dusty air): Inquire with Republic Manufacturing regarding service at (800) 847-0380.

### Commissioning After Longer Standstill:

Before recommissioning after a longer standstill, measure the insulation resistance of the drive motor. With values  $\leq 1\text{k}\Omega$  per volt of nominal voltage, the winding is too dry.

## Suitability & Environmental Conditions

-  The units are suitable for the use in the industrial field.
-  Use only clean, dry air. Do not use explosive gases or atmosphere that contains such gases.
-  The ambient and suction temperatures must be between 32 °F (0 °C) and 104 °F (40 °C). For temperatures outside this range please contact your supplier.
-  In all applications where an unplanned shut down of the blower could possibly cause harm to persons or installations, a corresponding safety backup system must be installed.
-  Protect all surrounding items from exhausted air. This exhausted air can be very hot.
-  Protect unit from contaminants and moisture. Air particles, water vapor, oil-based contaminants or other liquids must be removed.
-  Blower must be installed with the proper-sized inlet and inline filter, gauge and relief valve to protect the blower from contaminants and over-heating, overpressure.
-  When using the blower at a high altitude or high temperatures, please consult with Republic Manufacturing prior to use.

## Space Required for Installation

1. Allow at least 3 inches (76.2 mm) of clearance for removal and venting at the fan guard.
2. Allow at least 2 inches (50.8 mm) of clearance around the face of the blower cover.
3. Please refer to the blower dimensional drawings on individual specification sheets to determine the appropriate machine footprint.





## Intended Use

### This operating manual

- is intended for regenerative blowers models HRC100-HRC1502 and 4RC210-4RC630.
- contains instructions regarding transport and handling, installation, commissioning, operation, shut-down, storage, services, and disposal.
- must be completely read and understood by all operating and servicing personnel before beginning to work with or on the blowers.
- must be strictly observed.
- must be available at the site of operation.

### The HRC100-1502 & 4RC210-630

- are blower-motor units for generating vacuum or pressure.
- are used to extract, pump and compress the following gases:
  - Air.
  - Non-flammable, non-aggressive, non-toxic and non-explosive gases or gas-air mixtures.
  - With differing gases/gas-air mixtures, inquire with Republic Manufacturing.
- are equipped with one of the following kind of drive motors:
  - 3-phase AC drive motor with a standard, or
  - Single-phase AC drive motor.

These operating instructions apply only to blower units with a standard design:

- are intended for industrial applications.
- are designed for continuous operation. With increased switch-on frequency (6x per hour with equal pauses and operating times) or with increased gas inflow and ambient temperature, the excess temperature limit of the coil and the bearing can be exceeded. Consult Republic Manufacturing under such conditions.

The limits listed in “Technical Data” must always be complied with when operating Republic Regenerative Blowers.

### Foreseeable Misuse

It is prohibited

- to use the HRC100-HRC1502 or 4RC210-4RC630 in applications other than industrial applications unless the necessary protection is provided on the system, e.g. guards suitable for children's fingers;
- to use the device in areas in which explosive gases can occur if the blower is not expressly intended for this purpose;
- to extract, to deliver and to compress explosive, flammable, corrosive or toxic fluids, unless the blower is specifically designed for this purpose;
- to operate the blower with values other than those specified in “Technical Data”.

Any unauthorized modifications of the blower are prohibited for safety reasons. The operator is only permitted to perform the maintenance and service work described in these operating instructions. Maintenance and servicing work which goes beyond this may only be carried out by companies which have been authorized by Republic Manufacturing.



## Technical Data

| Blower  | Weight |     | Noise Level<br>(dBa) | Blower   | Weight |     | Noise Level<br>(dBa) |
|---------|--------|-----|----------------------|----------|--------|-----|----------------------|
|         | lb     | kg  |                      |          | lb     | kg  |                      |
| HRC100  | 22     | 10  | 53                   | HRC102   | 33     | 15  | 68                   |
| HRC101  | 24     | 11  | 56                   | HRC202   | 33     | 15  | 61                   |
| HRC200  | 30     | 15  | 64                   | HRC202/1 | 35     | 16  | 61                   |
| HRC201  | 30     | 15  | 64                   | HRC302   | 40     | 18  | 60                   |
| HRC300  | 51     | 23  | 70                   | HRC302/1 | 38     | 17  | 60                   |
| HRC301  | 53     | 24  | 70                   | HRC402S  | 55     | 25  | 69                   |
| HRC400  | 57     | 26  | 70                   | HRC402   | 60     | 27  | 6                    |
| HRC401  | 57     | 26  | 70                   | HRC402/1 | 68     | 31  | 72                   |
| HRC500  | 68     | 31  | 72                   | HRC502   | 78     | 35  | 74                   |
| HRC501  | 66     | 30  | 74                   | HRC602   | 88     | 40  | 74                   |
| HRC600  | 79     | 36  | 72                   | HRC702   | 90     | 41  | 74                   |
| HRC700  | 88     | 40  | 72                   | HRC802   | 123    | 56  | 76                   |
| HRC750  | 112    | 51  | 74                   | HRC902   | 154    | 70  | 76                   |
| HRC800  | 137    | 62  | 82                   | HRC1002  | 163    | 74  | 76                   |
| HRC900  | 143    | 65  | 82                   | HRC1102  | 230    | 104 | 78                   |
| HRC1000 | 265    | 121 | 82                   | HRC1202  | 265    | 120 | 78                   |
| HRC1020 | 126    | 57  | 74                   | HRC1302  | 412    | 187 | 78                   |
| HRC1040 | 146    | 66  | 74                   | HRC1402  | 434    | 197 | 78                   |
| HRC1060 | 153    | 69  | 74                   | HRC1452  | 450    | 204 | 78                   |
| HRC1100 | 205    | 93  | 79                   | HRC1502  | 465    | 211 | 78                   |
| HRC1200 | 256    | 116 | 79                   |          |        |     |                      |
| HRC1300 | 278    | 126 | 79                   |          |        |     |                      |

| Blower     | Weight |    | Noise Level<br>(dBa) | Blower     | Weight |    | Noise Level<br>(dBa) |
|------------|--------|----|----------------------|------------|--------|----|----------------------|
|            | lb     | kg |                      |            | lb     | kg |                      |
| 4RC210-A75 | 40     | 20 | 62                   | 4RC220-A75 | 67     | 34 | 62                   |
| 4RC210-H16 | 36     | 18 | 62                   | 4RC220-H26 | 53     | 27 | 62                   |
| 4RC310-A71 | 40     | 20 | 62                   | 4RC220-H56 | 67     | 34 | 62                   |
| 4RC310-H16 | 36     | 18 | 62                   | 4RC320-A75 | 79     | 36 | 63                   |
| 4RC310-H26 | 36     | 18 | 62                   | 4RC320-H46 | 71     | 32 | 63                   |
| 4RC410-A41 | 57     | 26 | 62                   | 4RC320-H56 | 75     | 34 | 63                   |
| 4RC410-H16 | 57     | 26 | 62                   | 4RC420-H26 | 82     | 37 | 66                   |
| 4RC510-H16 | 64     | 29 | 68                   | 4RC420-H56 | 95     | 43 | 66                   |
| 4RC510-H26 | 70     | 32 | 68                   | 4RC520-H26 | 100    | 45 | 70                   |
| 4RC610-H16 | 80     | 36 | 71                   | 4RC520-H77 | 126    | 57 | 71                   |
| 4RC610-H26 | 86     | 39 | 71                   | 4RC620-H36 | 106    | 48 | 71                   |
| 4RC630-H67 | 188    | 86 | 76                   | 4RC620-H57 | 144    | 65 | 72                   |



## Tightening Torques for Screw Connections

The following values apply if no other information is available.

With non-electrical connections, property classes of 8.8 and 8 or higher as per ISO 898-1 are assumed.

| Thread | Tightening torques for non-electrical connections |             |
|--------|---------------------------------------------------|-------------|
|        | [Nm]                                              | [ft lbs]    |
| M4     | 2.7 - 3.3                                         | 1.99 - 4.44 |
| M5     | 3.6 - 4.4                                         | 2.65 - 3.25 |
| M6     | 7.2 - 8.8                                         | 5.31 - 6.5  |
| M8     | 21.6 - 26.4                                       | 15.9 - 19.5 |
| M10    | 37.8 - 46.2                                       | 27.9 - 34.1 |
| M12    | 63.0 - 77.0                                       | 46.5 - 56.8 |

The following information for electrical connection applies to all terminal board connections with the exception of terminal strips.

| Thread | Tightening torques for electrical connections |             |
|--------|-----------------------------------------------|-------------|
|        | [Nm]                                          | [ft lbs]    |
| M4     | 0.8 - 1.2                                     | 0.59 - 0.89 |
| M5     | 1.8 - 2.5                                     | 1.33 - 1.84 |

Especially for metal and plastic threaded cable glands and pipe unions, the following values apply:

| Thread   | Tightening torques for metal threaded glands/unions |             |
|----------|-----------------------------------------------------|-------------|
|          | [Nm]                                                | [ft lbs]    |
| M12x1.5  | 4 - 6                                               | 2.95 - 4.43 |
| M 16x1.5 | 5 - 7.5                                             | 3.69 - 5.53 |
| M25x1.5  | 6 - 9                                               | 4.43 - 6.64 |
| M32x1.5  | 8 - 12                                              | 5.9 - 8.85  |
| M40x1.5  |                                                     |             |

| Thread  | Tightening torques for plastic threaded glands/unions |             |
|---------|-------------------------------------------------------|-------------|
|         | [Nm]                                                  | [ft lbs]    |
| M12x1.5 | 2 - 3.5                                               | 1.48 - 2.58 |
| M16x1.5 | 3 - 4                                                 | 2.21 - 2.95 |
| M25x1.5 | 4 - 5                                                 | 2.95 - 3.69 |
| M32x1.5 | 5 - 7                                                 | 3.69 - 5.16 |
| M40x1.5 |                                                       |             |

# Installation

Blower may be lifted manually or utilizing lifting equipment based on the instructions below:

**WARNING:** Danger from lifting heavy loads. Manual handling of the unit is only permitted within the following limits:

- max. 66 lbs (30 kg) for men
- max. 22 lbs (10 kg) for women
- max. 11 lbs (5 kg) for pregnant women

For the weight of the blower, see Mechanical Data section of this manual. All blowers heavier than the maximums stated above must be lifted using lifting equipment.

1. The blower is ready to connect upon delivery.
2. Install the blower on a level, stable operating surface and use the optional isolation pads to reduce noise and vibration. Attach the included loose muffler if necessary.
3. Have a qualified electrician configure the motor to your incoming voltage as noted in the "Motor Wiring" section of the manual. Refer to the nameplate on the motor for the correct power supply requirements.
4. To ensure sufficient cooling of the blower, it is absolutely necessary that the required minimum distances to the fan guard and the face of the blower cover be maintained. See "Mechanical Data" for minimum distances. Ventilation screens and openings must remain clear. Discharge air of other units may not be directly sucked in again.
5. The blower is suitable for installation within the following ambient conditions: dusty or damp environment, in buildings, in the open (though only if protected from intense sunlight exposure. The blower may be installed within the following conditions: on level surfaces, and at a maximum elevation of 1000 ft. above sea level. (For higher altitudes, contact Republic Manufacturing at 800-847-0380.)
6. Blower may be installed in any vertical/horizontal axis position with one exception: vertically with the blower face pointing upward.
7. From the motor side of the blower, verify the blower is rotating in the direction indicated by the arrow on the motor. (The motor side is marked with an arrow on most models.) Proper rotation can also be checked by the air flow at the inlet and outlet ports. On blowers powered by a 3 phase motor, change the connection of any two (2) wires to reverse blower rotation if needed.

## Plumbing & Accessories

1. Remove any foreign material (e.g. burrs, chips, welding drops, pipe cuttings, excess sealant, etc.) from plumbing.
2. Verify the motor is securely mounted and proper blower rotation before connecting to plumbing. The inlet and outlet port are not designed to support the plumbing without proper supporting elements.
3. Remove safety rubber plugs from the inlet and outlet ports.
4. Connect the plumbing with properly sized fittings.
5. Use a relief valve to discharge excess air beyond the preset level on pressure applications. Use a vacuum relief valve to draw in excess air when preset vacuum level is achieved.
6. Install an intake filter to prevent foreign material from entering the blower. In applications where there is high humidity or liquids being used in the process, install a moisture separator with a drain valve.
7. Install two (2) gauges - one before and one after the filter - to monitor differential air flow through the filter element. As filters become clogged, performance efficiency will be reduced. Filters should be checked periodically and replaced when necessary. The recommended check valves provide minimal pressure drop, positive sealing, and are resistant to the high discharge temperatures of the blowers.
8. Recommended piping should be, at minimum, the same size as the inlet and outlet ports on pressure systems.




**WARNING:** Exhaust air temperature increases significantly above 65"WC (162 mbar). Discharged air is typically too hot for most plastic piping, therefore metal piping is recommended. This piping must be guarded and marked "DANGER-HOT-DO NOT TOUCH".


9. Metal piping is recommended for the first 5 ft. (1.5 m) to 8 ft. (2.4 m) from the blower on pressure systems. Elbows increase friction, so elbows should be minimized to decrease friction loss.
10. Pressure or relief valves should be installed in a "T" that is at least one (1) pipe size larger than the port diameter.



## Typical Pressure Layout

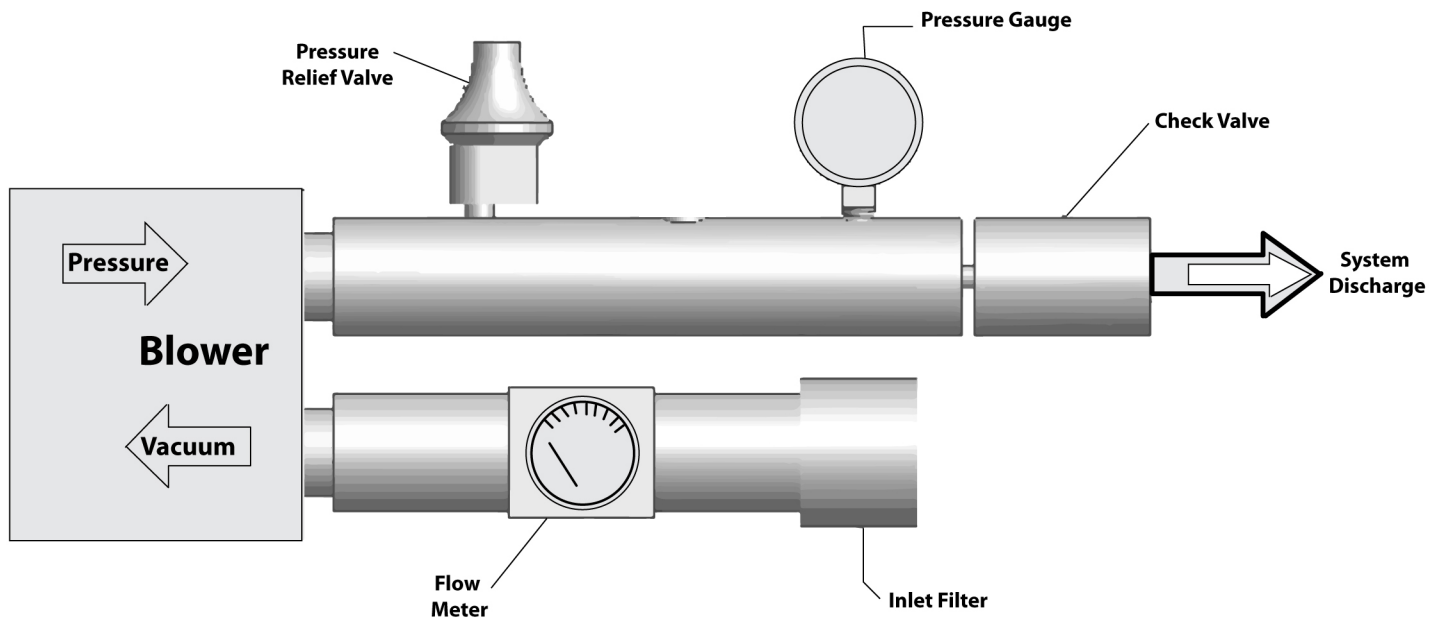

## Typical Vacuum Layout

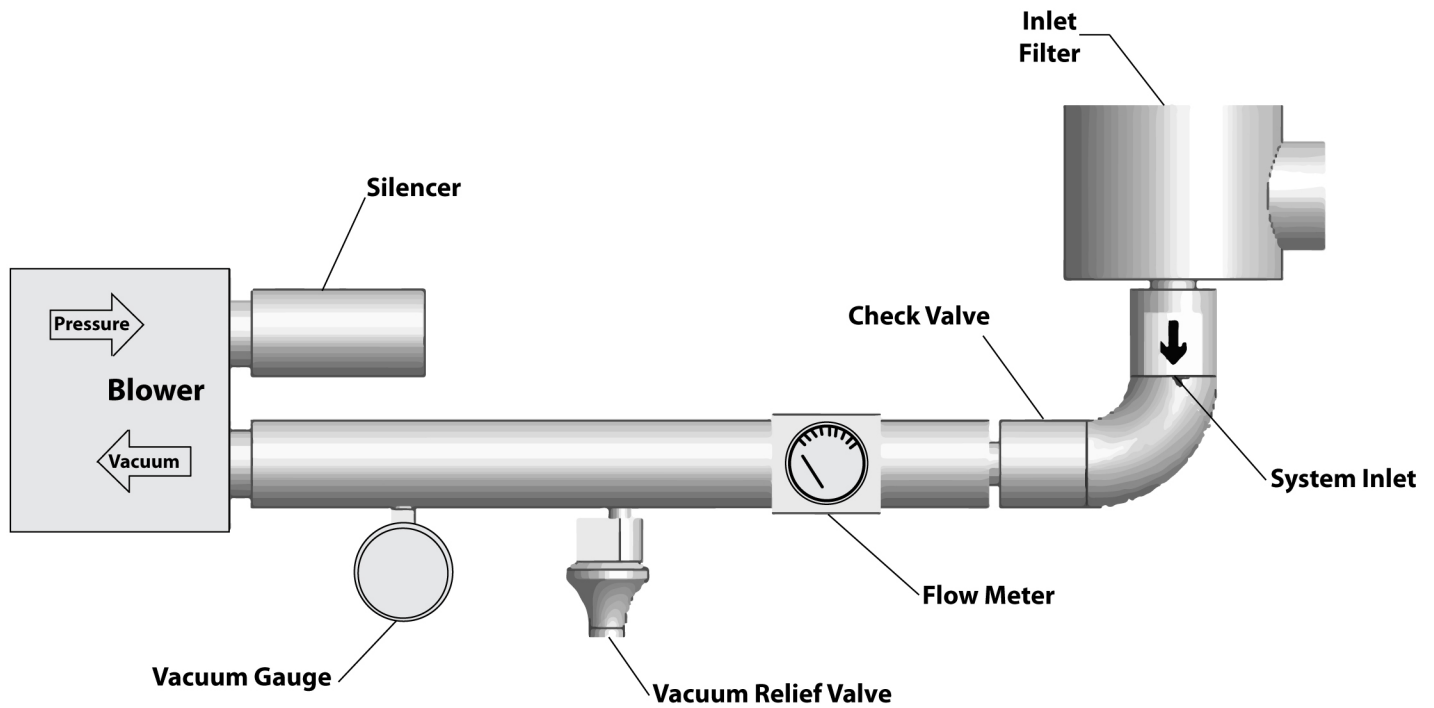

## Electrical Connection

 **DANGER:** Malpractice can result in severe injuries and material damage. The electrical connection may be performed by trained and authorized electricians only. Before beginning work on the unit or system, the following measures must be carried out:

- De-energize.
- Perform proper lockout/tagout procedures such that electricity cannot be turned on again.
- Confirm unit is de-energized.
- Ground and short-circuit.
- Cover or block-off adjacent energized parts

 **WARNING:** Incorrect connection of the motor can lead to serious damage to the unit.


- **ELECTRICAL POWER SUPPLY:** Observe the rating plate. It is imperative that the operating conditions correspond to the data given on the rating plate. Deviations permissible without reduction in performance include:
  - +/- 5% voltage deviation
  - +/- 2% frequency deviation
- **CONNECTION TO TERMINAL BOX:** Open the required cable entry openings on the terminal box. Here the following two cases are differentiated:
  - The cable entry opening is prefabricated and provided with a sealing plug.
  - Screw out sealing plug.

OR

- The cable entry opening is closed off with a casting skin (only on blower with drive-motor axis heights of 100" [2.5 m] to 160" [4.0 m] in standard design).
- Break out casting skin using a suitable tool. For example, use a metal pin with a corresponding diameter or a chisel and hammer.
- Mount cable glands on the terminal box. Proceed as follows:
  - Select one cable gland in each case which is suitable for the cable diameter.
  - Insert this cable gland in the opening of the terminal box. Use a reducer if necessary.
  - Screw on the cable gland so that no moisture, dirt, etc. can penetrate into the terminal box.
- Carry out the connection and arrangement of the jumpers in accordance with the wiring diagram in the terminal box or "Wiring Diagram" section of this manual.
- The electrical connection must be carried out as follows:
  - The electrical connection must be permanently safe.
  - **DANGER:** The terminal box must be free from foreign bodies, dirt, and humidity. Terminal box cover and cable entries must be tightly closed so as to make them dust-proof and waterproof. Check for tightness at regular intervals.
  - **DANGER:** There may be no protruding wire ends.
  - **DANGER:** Clearance between bare live parts and between bare live parts and ground :  $\geq 0.22$  in. (5.5 mm) at a nominal voltage of  $U_N \leq 690$  V.
  - For the tightening torques for terminal board connections (except terminal strips), see "Tightening Torques for Screw Connections".
- For motor overload protection, use motor circuit breakers and adjust to the specified nominal current as listed on the rating plate.
- **DANGER:** There is danger of an electrical shock when a defective blower is touched. Mount motor circuit breaker. Have electrical equipment checked regularly by an electrician.

## Wiring Diagram - Single Phase


Most Republic single phase regenerative blowers use the wiring diagram shown below. Always follow the wiring diagram on the inside of the blower's terminal box cover. Special versions may exist.

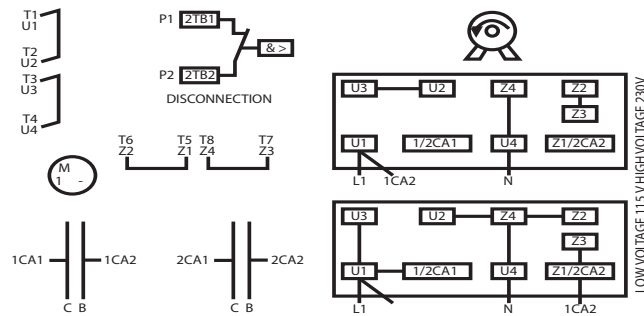

## Wiring Diagram - Three Phase

Most Republic three phase regenerative blowers use the wiring diagram show below. Always follow the wiring diagram on the inside of the blower's terminal box cover. Special versions may exist.

The blower data tag located at the top of the motor will match one of these four diagrams below. Each combination of hertz and voltage has a symbol next to it indicating which diagram should be followed for that configuration. Match the symbol next to hertz and voltage to the symbols above the diagram. Once wired, check rotation. If reversed, swap any two leads.

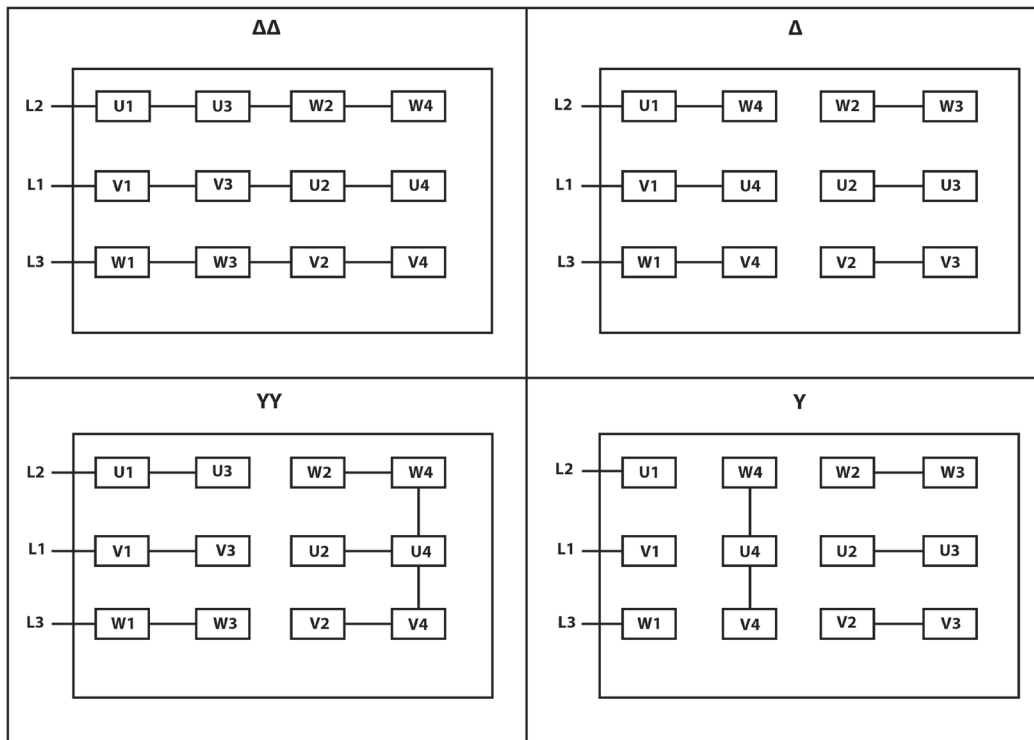

## Thermal Leads

Republic regenerative blowers have two small black wires coming from the motor that are not connected to the terminal blocks. These wires are for use with motor over temperature protection features sometimes used in control panels. If a control panel without this feature is used, simply cap off the wires and do not use them.

# Commissioning

**WARNING:** Improper use of the unit can result in serious or even fatal injuries. Do not proceed without reading Safety Instructions.

**WARNING:** Danger from rotating parts cutting/cutting off of extremities, grasping/winding up of hair and clothing.

**WARNING:** Danger due to vacuum and pressure, sudden escape of vapor (skin and eye injuries), sudden drawing in of hair and clothing, or burns.

Only start-up and operate under the following conditions:

- The blower must be completely assembled. Pay particular attention to the following components:
  - the blower cover,
  - the muffler on inlet and discharge connections, and
  - the fan guard.
- The pipes/hoses must be connected to inlet and discharge connections.
- Inlet and discharge connections and the connected pipes/hoses may not be closed, clogged or soiled.
- Check the mounting elements, connections of the pipe/hose, lines, fittings and containers for strength, leaks and firm seating at regular intervals.

## Preparation

**DANGER:** Blower can overheat causing damage to the drive motor winding if intake or discharge connections are closed/soiled. Before start-up, make sure the inlet and discharge connections are not closed, clogged or soiled.

**CAUTION:** Before starting up after a longer standstill: Measure the insulation resistance of the motor. With values  $\leq 1 \text{ k}\Omega$  per volt of nominal voltage, the winding is too dry.

1. Check the direction of the rotation. The intended rotating direction of the shaft is marked with arrows on the housing.
2. The gas delivery direction is marked with arrows on the inlet and discharge connections.
3. Make sure the pipes/hoses on the inlet and discharge connections are properly connected.
4. Switch the blower on briefly and then off again.
5. Compare the actual rotating direction of the external fan with the intended shaft rotating direction indicated with the arrows shortly before the blower comes to a standstill.
6. If necessary, reverse the direction of the rotation of the motor.
7. Observe the operating speed specified on the rating plate. This may not be exceeded, as otherwise the noise radiation, vibration behavior, grease consumption duration and bearing change interval worsen. To prevent damage as a result of higher speeds, it may be necessary to inquire with Republic Manufacturing as to the maximum speed.

## Start-Up


1. Open shut-off device in intake/discharge pipe.
2. Switch on power supply for drive motor.
3. Operate blower for an hour, and then check:
  - Ambient temperature - increased room temperatures may require stronger ventilation especially for larger blowers. Room temperature should not exceed 104 (40°C).
  - Pressure and vacuum valves - adjust relief valve pressure or vacuum setting if needed.
  - Motor current - check that current supply matches recommended current rating on blower nameplate.
  - Electrical overload cutout - check that current matches rating on blower nameplate

If motor fails to start or slows down significantly under load, shut off and disconnect from power supply. Check that the voltage is correct for the motor and that the motor is turning in the proper direction.

## Shut-Down

1. Switch off power supply for drive motor.
2. Close shut-off device in intake/discharge pipe, if applicable.



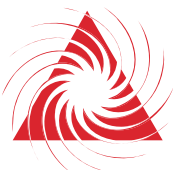

## Operation

**WARNING:** Improper use of the unit can result in serious or even fatal injuries. Do not proceed without reading Safety Instructions.

**WARNING:** Danger due to vacuum and pressure, sudden escape of vapors (skin and eye injuries), sudden drawing in of hair and clothing.

**WARNING:** Danger of overheating due to hot surface of blower. High temperatures of up to approximately 320°F (160°C) can occur on the surface of the blower. Do not touch during operation. Allow to cool after shut-down.

**CAUTION:** Danger of overheating due to hot surface of blower. Temperature sensitive parts, such as lines or electronic components, may not come into contact with the surface of the blower.

**CAUTION:** Danger of rusting due to collection of condensed water in drive motor area. On drive motors with closed condensed water openings, remove closures occasionally to allow any water which has collected to drain off.

**CAUTION:** Danger of bearing damage. Heavy mechanical impacts must be avoided during operating and while at standstill.

## Shut-Down & Longer Standstills

### Preparing for shut-down or longer standstill

**WARNING:** Improper use of the unit can result in serious or even fatal injuries. Do not proceed without reading "Safety Instructions".

**CAUTION:** Danger of rusting due to collection of condensed water in drive motor area. On drive motors with closed condensed water openings, remove closures occasionally to allow any water which has collected to drain off.

**CAUTION:** Danger of bearing damage. Heavy mechanical impacts must be avoided during operating and while at standstill.

Prior to shut-down or longer standstill, proceed as follows:

1. Switch off the blower.
2. Close shut-off device in inlet and pressure line if installed.
3. Disconnect blower from power supply.
4. Release pressure. Open pipes/hoses slowly and carefully so that the vacuum or gauge pressure in the blower can be released.
5. Remove pipes/hoses.
6. Provide mufflers on inlet and discharge side with sealing plugs.

## Servicing

**WARNING:** Improper use of the unit can result in serious or even fatal injuries. Do not proceed without reading "Safety Instructions".

### Emptying/Rinsing/Cleaning

Before any maintenance/servicing work, empty, rinse and clean the outside of the unit.

1. Empty unit with air and rinse until all residues have been removed.
2. Clean the outside of the unit with compressed air.
  - Wear gloves and protective safety glasses.
  - Secure the surrounding area.
  - Clean the entire surface of the unit and exterior fan with compressed air.

### Preventative Maintenance

After the first 100 hours of operation, the following need to be checked:

- filter elements;
- noise absorbing foam in mufflers; and
- motor and blower cleanliness.

Replace filter elements as needed. Mufflers should be checked on a monthly basis.

## Troubleshooting

| Problem                                                                    | Reason                                          | Remedy                                                                                |
|----------------------------------------------------------------------------|-------------------------------------------------|---------------------------------------------------------------------------------------|
| Increased sound                                                            | Noise absorbing foam is damaged                 | Replace foam.                                                                         |
|                                                                            | Impeller rubbing inside                         | Send unit to Republic Authorized Repair Facility.                                     |
| Excessive vibration                                                        | Damaged impeller                                | Replace impeller.                                                                     |
|                                                                            | Motor and/or impeller are dirty                 | Clean motor and impeller periodically.                                                |
| Ambient and exhaust temperature increases                                  | Motor and/or blower are dirty                   | Clean motor and blower periodically.                                                  |
|                                                                            | Filters are dirty                               | Replace filters.                                                                      |
| Decreased inlet air pressure                                               | Inlet air filter is clogged                     | Clean inlet filter or replace cartridge.                                              |
| Unit is very hot                                                           | Wrong wiring                                    | Check wiring.                                                                         |
|                                                                            | Low voltage                                     | Supply proper voltage.                                                                |
|                                                                            | Inlet air filter is clogged                     | Clean inlet filter.                                                                   |
|                                                                            | Motor and/or blower are dirty                   | Replace cartridge.                                                                    |
|                                                                            | Operating pressure or vacuum is too high        | Clean motor and blower periodically.                                                  |
|                                                                            |                                                 | Install a relief valve and pressure or vacuum gauge.                                  |
| Unusual sound                                                              | Impeller is damaged or dirty                    | Clean or replace impeller.                                                            |
|                                                                            | Bearing failure                                 | Send unit to Republic Authorized Repair Facility.                                     |
|                                                                            | Flow speed is too high                          | Clean pipes. Use pipe with larger cross-section if necessary.                         |
|                                                                            | Muffler is dirty                                | Clean or replace muffler inserts.                                                     |
| Motor overload                                                             | Low voltage                                     | Check power source.                                                                   |
|                                                                            |                                                 | Check wire size and wire connections.                                                 |
| Unit does not start                                                        | Incorrect electrical connection or power source | Check wiring diagram, circuit fusing and circuit capacity.                            |
|                                                                            | Impeller is damaged                             | Clean or replace impeller.                                                            |
|                                                                            |                                                 | Install proper filtration.                                                            |
| Blower does not generate any or generates insufficient pressure difference | Leak in system                                  | Seal leak in system.                                                                  |
|                                                                            | Wrong direction of rotation                     | Reverse direction of rotation by interchanging two connecting leads.                  |
|                                                                            | Incorrect frequency                             | Correct frequency.                                                                    |
|                                                                            | Shaft seal defective                            | Replace shaft seal.                                                                   |
|                                                                            | Different density of pumped gas                 | Take conversion of pressure values into account. Inquire with Republic Manufacturing. |
|                                                                            | Impeller is damaged                             | Clean or replace impeller.                                                            |
| Blower leaking                                                             | Seals on muffler are defective                  | Check muffler seals and replace if necessary.                                         |
|                                                                            | Seals in motor area are defective               | Check motor seals and replace if necessary.                                           |



## In the Event of a Breakdown

1. Use a lockout/tagout procedure to ensure the blower may be worked on safely.
2. Refer to the "Troubleshooting" section of the manual to determine the cause of the breakdown and the appropriate action to take.
3. If further assistance is needed, please call Republic Manufacturing at 800-847-0380.

## When to Ship the Blower Back to Republic

If you cannot fix or troubleshoot your blower system using this manual then a skilled Republic Manufacturing professional is required. Please ship your blower back to Republic Manufacturing.

## Disabling, Dismantling, and Scrapping of Blower

1. Disable the blower using the lockout/tagout procedure outlined in the manual.
2. Scrap entire unit using a suitable disposal company.
3. Most components are aluminum, stainless steel, or zinc-plated mild steel and may be recycled or disposed of as such.

## Warranty Terms and Conditions

Republic Manufacturing warrants all finished Republic Manufacturing products to be free from functional defects in material and workmanship for a period of twelve (12) months from the date of installation, or no longer than eighteen (18) months from shipment.

Wear parts such as filter elements, hoses and piping are not covered by the 12 to 18 month warranty.

### **DISASSEMBLY OF BLOWER MAY VOID WARRANTY.**


To obtain service within the warranty period, first contact your authorized Republic Manufacturing dealer or Republic Manufacturing Service Department. Republic's responsibility under this warranty shall be to provide an analysis of the blower, which will determine course of action. Any product found to be defective within the warranty period will merit either:

- a. A no charge repair of existing blower. Any freight charges will be the purchaser's responsibility.
- b. A replacement blower\*. Any freight charges will be the purchaser's responsibility.

\*This option would be a chargeable replacement until the original blower is received by Republic Manufacturing, and warranty is approved.

Republic Manufacturing shall not be liable for incidental nor consequential damages resulting from the use of this product. There are no expressed nor implied warranties, which extend beyond the warranty of merchantability or fitness for a particular purpose to the equipment and/or its parts and components.

# Exploded View

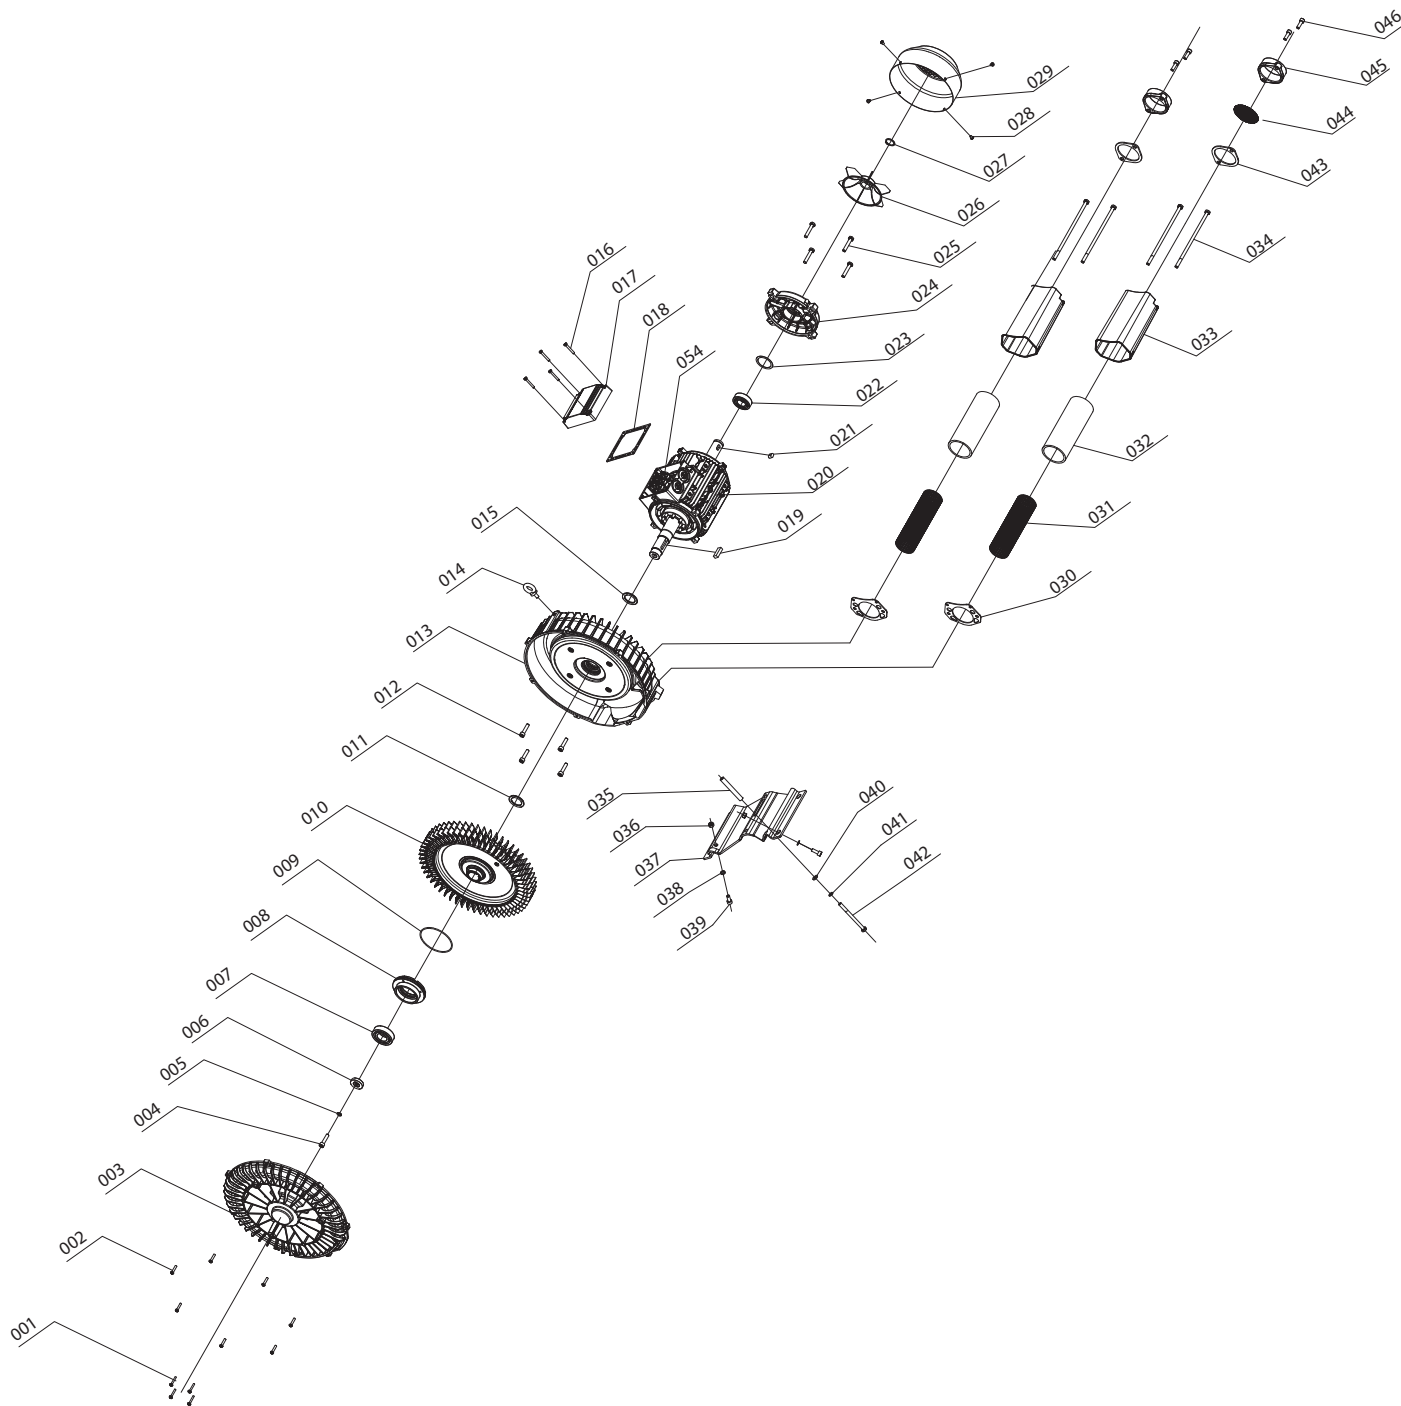



## 4RC-210

| Position No.    | Description           | 4RC210-H16      | 4RC210-A75       |
|-----------------|-----------------------|-----------------|------------------|
| 003             | Front Cover           | 3035700         | 3035700          |
| 007             | Front bearing         | 3071800         | 3071800          |
| 008             | Bearing cover         | 3081800         | 3081800          |
| 009             | O-Ring                | 3095700         | 3095700          |
| 010             | Impeller              | 3105700         | 3105700          |
| 013             | Housing               | 3135700         | 3135700          |
| 015             | Shaft lip seal        | 3155700         | 3155700          |
| 017             | Junction box cover    | 3170100         | 3170100          |
| 018             | Junction box gasket   | 3180100         | 3180100          |
| 019             | Key                   | 3191800         | 3191800          |
| 021             | Rotor                 | 3215700         | 3215800          |
| 022             | Rear bearing          | 3220100         | 3220100          |
| 024             | Motor cover           | 3240100         | 3240100          |
| 026             | External fan          | 3260100         | 3260100          |
| 027             | Retaining ring        | 3270100         | 3270100          |
| 029             | Fan cowl              | 3290100         | 3290100          |
| 030             | Gasket                | 3300100         | 3300100          |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100          |
| 031             | Silencer insert       | 3310100         | 3310100          |
| 032             | Silencer inlet filter | 3320100         | 3320100          |
| 033             | Silencer housing      | 3330100         | 3330100          |
| 034             | Silencer Bolts        | 3340100         | 3340100          |
| 043             | Flange gasket         | 3430100         | 3430100          |
| 045             | Flange                | 3450100         | 3450100          |
| 053             | Capacitor             | N/A             | Contact Republic |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112  |

## 4RC-310

| Position No.    | Description           | 4RC310-H16      | 4RC310-H26      | 4RC310-A71       |
|-----------------|-----------------------|-----------------|-----------------|------------------|
| 003             | Front Cover           | 3036200         | 3036200         | 3036200          |
| 007             | Front bearing         | 3071800         | 3071800         | 3071800          |
| 008             | Bearing cover         | 3081800         | 3081800         | 3081800          |
| 009             | O-Ring                | 3095700         | 3095700         | 3095700          |
| 010             | Impeller              | 3106200         | 3106200         | 3106200          |
| 013             | Housing               | 3136200         | 3136200         | 3136200          |
| 015             | Shaft lip seal        | 3155700         | 3155700         | 3155700          |
| 017             | Junction box cover    | 3170100         | 3170100         | 3170100          |
| 018             | Junction box gasket   | 3180100         | 3180100         | 3180100          |
| 019             | Key                   | 3191800         | 3191800         | 3191800          |
| 021             | Rotor                 | 3216200         | 3216300         | 3216400          |
| 022             | Rear bearing          | 3220100         | 3226000         | 3226000          |
| 024             | Motor cover           | 3240100         | 3240900         | 3240900          |
| 026             | External fan          | 3260100         | 3260900         | 3260900          |
| 027             | Retaining ring        | 3270100         | 3270900         | 3270900          |
| 029             | Fan cowl              | 3290100         | 3290100         | 3290900          |
| 030             | Gasket                | 3300100         | 3300100         | 3300100          |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         | 3500100          |
| 031             | Silencer insert       | 3310100         | 3310100         | 3310100          |
| 032             | Silencer inlet filter | 3320100         | 3320100         | 3320100          |
| 033             | Silencer housing      | 3330100         | 3330100         | 3330100          |
| 034             | Silencer bolts        | 3340100         | 3340100         | 3340100          |
| 043             | Flange gasket         | 3430100         | 3430100         | 3430100          |
| 045             | Flange                | 3450100         | 3450100         | 3450100          |
| 053             | Capacitor             | N/A             | N/A             | Contact Republic |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112 | 3540106/3540112  |



## 4RC-410

| Position No.    | Description           | 4RC410-H16      | 4RC410-A41      |
|-----------------|-----------------------|-----------------|-----------------|
| 003             | Front Cover           | 3036800         | 3036800         |
| 007             | Front bearing         | 3071800         | 3071800         |
| 008             | Bearing cover         | 3081800         | 3081800         |
| 009             | O-Ring                | 3095700         | 3095700         |
| 010             | Impeller              | 3106800         | 3106800         |
| 013             | Housing               | 3136800         | 3136800         |
| 015             | Shaft lip seal        | 3155700         | 3155700         |
| 017             | Junction box cover    | 3170100         | 3170100         |
| 018             | Junction box gasket   | 3180100         | 3180100         |
| 019             | Key                   | 3191800         | 3191800         |
| 021             | Rotor                 | 3216800         | 3216900         |
| 022             | Rear bearing          | 3226000         | 3226000         |
| 024             | Motor cover           | 3240900         | 3240900         |
| 026             | External fan          | 3260900         | 3260900         |
| 027             | Retaining ring        | 3270900         | 3270900         |
| 029             | Fan cowl              | 3290900         | 3290900         |
| 030             | Gasket                | 3300100         | 3300100         |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         |
| 031             | Silencer insert       | 3310100         | 3310100         |
| 032             | Silencer inlet filter | 3320100         | 3320100         |
| 033             | Silencer housing      | 3330100         | 3330100         |
| 034             | Silencer bolts        | 3340100         | 3340100         |
| 043             | Flange gasket         | 3430100         | 3430100         |
| 045             | Flange                | 3450100         | 3450100         |
| 053             | Capacitor             | N/A             | 3533000         |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112 |

## 4RC-510

| Position No.    | Description           | 4RC510-H16      | 4RC510-H26      |
|-----------------|-----------------------|-----------------|-----------------|
| 003             | Front Cover           | 3037200         | 3037200         |
| 007             | Front bearing         | 3072900         | 3072900         |
| 008             | Bearing cover         | 3082900         | 3082900         |
| 009             | O-Ring                | 3092900         | 3092900         |
| 010             | Impeller              | 3107200         | 3107200         |
| 013             | Housing               | 3137200         | 3137200         |
| 015             | Shaft lip seal        | 3157200         | 3157200         |
| 017             | Junction box cover    | 3170100         | 3170100         |
| 018             | Junction box gasket   | 3180100         | 3180100         |
| 019             | Key                   | 3192900         | 3192900         |
| 021             | Rotor                 | 3217200         | 3217300         |
| 022             | Rear bearing          | 3226000         | 3226000         |
| 024             | Motor cover           | 3241800         | 3241800         |
| 026             | External fan          | 3261800         | 3261800         |
| 027             | Retaining ring        | 3271500         | 3271500         |
| 029             | Fan cowl              | 3291800         | 3292400         |
| 030             | Gasket                | 3300100         | 3300100         |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         |
| 031             | Silencer insert       | 3310100         | 3310100         |
| 032             | Silencer inlet filter | 3320100         | 3320100         |
| 033             | Silencer housing      | 3330100         | 3330100         |
| 034             | Silencer bolts        | 3340100         | 3340100         |
| 043             | Flange gasket         | 3430100         | 3430100         |
| 045             | Flange                | 3450100         | 3450100         |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112 |





## 4RC-610

| Position No.    | Description           | 4RC610-H16      | 4RC610-H26      |
|-----------------|-----------------------|-----------------|-----------------|
| 003             | Front Cover           | 3037600         | 3037600         |
| 007             | Front bearing         | 3072900         | 3072900         |
| 008             | Bearing cover         | 3082900         | 3082900         |
| 009             | O-Ring                | 3095700         | 3095700         |
| 010             | Impeller              | 3107600         | 3107600         |
| 013             | Housing               | 3137600         | 3137600         |
| 015             | Shaft lip seal        | 3157200         | 3157200         |
| 017             | Junction box cover    | 3170100         | 3170100         |
| 018             | Junction box gasket   | 3180100         | 3180100         |
| 019             | Key                   | 3192900         | 3192900         |
| 021             | Rotor                 | 3217600         | 3217700         |
| 022             | Rear bearing          | 3226000         | 3222100         |
| 024             | Motor cover           | 3241800         | 3242500         |
| 026             | External fan          | 3261800         | 3263100         |
| 027             | Retaining ring        | 3271500         | 3273100         |
| 029             | Fan cowl              | 3292400         | 3292400         |
| 030             | Gasket                | 3300100         | 3300100         |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         |
| 031             | Silencer insert       | 3310100         | 3310100         |
| 032             | Silencer inlet filter | 3320100         | 3320100         |
| 033             | Silencer housing      | 3330100         | 3330100         |
| 034             | Silencer bolts        | 3340100         | 3340100         |
| 043             | Flange gasket         | 3430100         | 3430100         |
| 045             | Flange                | 3450100         | 3450100         |
| 054             | Terminal Block        | 3540106/3540112 | 3543106/3543112 |

## HRC-025/025-1

| Position No.    | Description           | HRC025          | HRC025-1         |
|-----------------|-----------------------|-----------------|------------------|
| 003             | Front Cover           | 3030100         | 3030100          |
| 007             | Front bearing         | 3070100         | 3070100          |
| 008             | Bearing cover         | 3080100         | 3080100          |
| 009             | O-Ring                | N/A             | N/A              |
| 010             | Impeller              | 3100100         | 3100100          |
| 013             | Housing               | 3130100         | 3130100          |
| 015             | Shaft lip seal        | 3150100         | 3150100          |
| 017             | Junction box cover    | 3170100         | 3170100          |
| 018             | Junction box gasket   | 3180100         | 318000           |
| 019             | Key                   | 3190100         | 3190100          |
| 021             | Rotor                 | 3210100         | 3210200          |
| 022             | Rear bearing          | 3220100         | 3220100          |
| 024             | Motor cover           | 3240100         | 3240100          |
| 026             | External fan          | 3260100         | 3260100          |
| 027             | Retaining ring        | 3270100         | 3270100          |
| 029             | Fan cowl              | 3290100         | 3290100          |
| 030             | Gasket                | 3300100         | 3300100          |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100          |
| 031             | Silencer insert       | 3310100         | 3310100          |
| 032             | Silencer inlet filter | 3320100         | 3320100          |
| 033             | Silencer housing      | 3330100         | 3330100          |
| 034             | Silencer bolts        | 3340100         | 3340100          |
| 043             | Flange gasket         | 3430100         | 3430100          |
| 045             | Flange                | 3450100         | 3450100          |
| 053             | Capacitor             | N/A             | Contact Republic |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112  |



## HRC-100/101

| Position No.    | Description           | HRC100          | HRC101           |
|-----------------|-----------------------|-----------------|------------------|
| 003             | Front Cover           | 3030300         | 3030300          |
| 007             | Front bearing         | 3070100         | 3070100          |
| 008             | Bearing cover         | 3080100         | 3080100          |
| 009             | O-Ring                | N/A             | N/A              |
| 010             | Impeller              | 3100100         | 3100100          |
| 013             | Housing               | 3130300         | 3130300          |
| 015             | Shaft lip seal        | 3150100         | 3150100          |
| 017             | Junction box cover    | 3170100         | 3170100          |
| 018             | Junction box gasket   | 3180100         | 3180100          |
| 019             | Key                   | 3190100         | 3190100          |
| 021             | Rotor                 | 3210300         | 3210400          |
| 022             | Rear bearing          | 3220100         | 3220100          |
| 024             | Motor cover           | 3240100         | 3240100          |
| 026             | External fan          | 3260100         | 3260100          |
| 027             | Retaining ring        | 3270100         | 3270100          |
| 029             | Fan cowl              | 3290100         | 3290100          |
| 030             | Gasket                | 3300100         | 3300100          |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100          |
| 031             | Silencer insert       | 3310100         | 3310100          |
| 032             | Silencer inlet filter | 3320100         | 3320100          |
| 033             | Silencer housing      | 3330100         | 3330100          |
| 034             | Silencer bolts        | 3340100         | 3340100          |
| 043             | Flange gasket         | 3430100         | 3430100          |
| 045             | Flange                | 3450100         | 3450100          |
| 053             | Capacitor             | N/A             | Contact Republic |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112  |

## HRC-200/201

| Position No.    | Description           | HRC200          | HRC201          |
|-----------------|-----------------------|-----------------|-----------------|
| 003             | Front Cover           | 3031100         | 3031100         |
| 007             | Front bearing         | 3071100         | 3071100         |
| 008             | Bearing cover         | 3081100         | 3081100         |
| 009             | O-Ring                | N/A             | N/A             |
| 010             | Impeller              | 3101100         | 3101100         |
| 013             | Housing               | 3131100         | 3131100         |
| 015             | Shaft lip seal        | 3151100         | 3151100         |
| 017             | Junction box cover    | 3170100         | 3170100         |
| 018             | Junction box gasket   | 3180100         | 3180100         |
| 019             | Key                   | 3191100         | 3191100         |
| 021             | Rotor                 | 3211100         | 3211200         |
| 022             | Rear bearing          | 3220100         | 3220100         |
| 024             | Motor cover           | 3240100         | 3240100         |
| 026             | External fan          | 3260100         | 3260100         |
| 027             | Retaining ring        | 3270100         | 3270100         |
| 029             | Fan cowl              | 3290100         | 3290100         |
| 030             | Gasket                | 3301100         | 3301100         |
| 031/032/033/034 | Silencer Assembly     | 3501100         | 3501100         |
| 031             | Silencer insert       | 3311100         | 3311100         |
| 032             | Silencer inlet filter | 3321100         | 3321100         |
| 033             | Silencer housing      | 3331100         | 3331100         |
| 034             | Silencer bolts        | 3341100         | 3341100         |
| 043             | Flange gasket         | 3431100         | 3431100         |
| 045             | Flange                | 3451100         | 3451100         |
| 053             | Capacitor             | N/A             | 3531200         |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112 |



## HRC-300/301/400/401

| Position No.    | Description           | HRC300          | HRC301           | HRC400          | HRC401           |
|-----------------|-----------------------|-----------------|------------------|-----------------|------------------|
| 003             | Front Cover           | 3031800         | 3031800          | 3031800         | 3031800          |
| 007             | Front bearing         | 3071800         | 3071800          | 3071800         | 3071800          |
| 008             | Bearing cover         | 3081800         | 3081800          | 3081800         | 3081800          |
| 009             | O-Ring                | N/A             | N/A              | N/A             | N/A              |
| 010             | Impeller              | 3101800         | 3101800          | 3101800         | 3101800          |
| 013             | Housing               | 3131800         | 3131800          | 3131800         | 3131800          |
| 015             | Shaft lip seal        | 3151800         | 3151800          | 3151800         | 3151800          |
| 017             | Junction box cover    | 3170100         | 3170100          | 3170100         | 3170100          |
| 018             | Junction box gasket   | 3180100         | 3180100          | 3180100         | 3180100          |
| 019             | Key                   | 3191800         | 3191800          | 3191800         | 3191800          |
| 021             | Rotor                 | 3211800         | 3211900          | 3212000         | 3212100          |
| 022             | Rear bearing          | 3221800         | 3221800          | 3221800         | 3222100          |
| 024             | Motor cover           | 3241800         | 3241800          | 3241800         | 3241800          |
| 026             | External fan          | 3261800         | 3261800          | 3261800         | 3261800          |
| 027             | Retaining ring        | 3271500         | 3271500          | 3271500         | 3271500          |
| 029             | Fan cowl              | 3291800         | 3291800          | 3292400         | 3291800          |
| 030             | Gasket                | 3301800         | 3301800          | 3301800         | 3301800          |
| 031/032/033/034 | Silencer Assembly     | 3501800         | 3501800          | 3501800         | 3501800          |
| 031             | Silencer insert       | 3311800         | 3311800          | 3311800         | 3311800          |
| 032             | Silencer inlet filter | 3321800         | 3321800          | 3321800         | 3321800          |
| 033             | Silencer housing      | 3331800         | 3331800          | 3331800         | 3331800          |
| 034             | Silencer bolts        | 3341800         | 3341800          | 3341800         | 3341800          |
| 043             | Flange gasket         | 3431800         | 3431800          | 3431800         | 3431800          |
| 045             | Flange                | 3451800         | 3451800          | 3451800         | 3451800          |
| 053             | Capacitor             | N/A             | Contact Republic | N/A             | Contact Republic |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112  | 3540106/3540112 | 3540106/3540112  |

## HRC-500/501/600/700

| Position No.    | Description           | HRC500          | HRC501          | HRC600          | HRC700          |
|-----------------|-----------------------|-----------------|-----------------|-----------------|-----------------|
| 003             | Front Cover           | 3032900         | 3032900         | 3032900         | 3032900         |
| 007             | Front bearing         | 3072900         | 3072900         | 3072900         | 3072900         |
| 008             | Bearing cover         | 3082900         | 3082900         | 3082900         | 3082900         |
| 009             | O-Ring                | 3092900         | 3092900         | 3092900         | 3092900         |
| 010             | Impeller              | 3102900         | 3102900         | 3102900         | 3102900         |
| 013             | Housing               | 3132900         | 3132900         | 3132900         | 3132900         |
| 015             | Shaft lip seal        | 3152000         | 3152000         | 3152000         | 3152000         |
| 017             | Junction box cover    | 3170100         | 3170100         | 3173100         | 3173100         |
| 018             | Junction box gasket   | 3180100         | 3180100         | 3183100         | 3183100         |
| 019             | Key                   | 3192900         | 3192900         | 3192900         | 3192900         |
| 021             | Rotor                 | 3212900         | 3213000         | 3213100         | 3213200         |
| 022             | Rear bearing          | 3221800         | 3222100         | 3223100         | 3223100         |
| 024             | Motor cover           | 3241800         | 3241800         | 3242500         | 3242500         |
| 026             | External fan          | 3261800         | 3261800         | 3263100         | 3263100         |
| 027             | Retaining ring        | 3271500         | 3271500         | 3273100         | 3273100         |
| 029             | Fan cowl              | 3292400         | 3292400         | 3292900         | 3292900         |
| 030             | Gasket                | 3301800         | 3301800         | 3301800         | 3301800         |
| 031/032/033/034 | Silencer Assembly     | 3501800         | 3501800         | 3501800         | 3501800         |
| 031             | Silencer insert       | 3311800         | 3311800         | 3311800         | 3311800         |
| 032             | Silencer inlet filter | 3321800         | 3321800         | 3321800         | 3321800         |
| 033             | Silencer housing      | 3331800         | 3331800         | 3331800         | 3331800         |
| 034             | Silencer bolts        | 3341800         | 3341800         | 3341800         | 3341800         |
| 043             | Flange gasket         | 3431800         | 3431800         | 3431800         | 3431800         |
| 045             | Flange                | 3451800         | 3451800         | 3451800         | 3451800         |
| 053             | Capacitor             | N/A             | 3533000         | N/A             | N/A             |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112 | 3543106/3543112 | 3543106/3543112 |



## HRC-750/800/900/1000

| Position No.    | Description           | HRC750          | HRC800          | HRC900          | HRC1000         |
|-----------------|-----------------------|-----------------|-----------------|-----------------|-----------------|
| 003             | Front Cover           | 3033900         | 3033900         | 3033900         | 3033900         |
| 007             | Front bearing         | 3073900         | 3073900         | 3073900         | 3073900         |
| 008             | Bearing cover         | 3083900         | 3083900         | 3083900         | 3083900         |
| 009             | O-Ring                | 3093900         | 3093900         | 3093900         | 3093900         |
| 010             | Impeller              | 3103900         | 3103900         | 3103900         | 3103900         |
| 013             | Housing               | 3133900         | 3133900         | 3133900         | 3133900         |
| 015             | Shaft lip seal        | 3154400         | 3154400         | 3154400         | 3154400         |
| 017             | Junction box cover    | 3173100         | 3174000         | 3174000         | 3174000         |
| 018             | Junction box gasket   | 3184000         | 3184000         | 3184000         | 3184000         |
| 019             | Key                   | 3193900         | 3193900         | 3193900         | 3193900         |
| 021             | Rotor                 | 3213900         | 3214000         | 3214100         | 3218100         |
| 022             | Rear bearing          | 3223100         | 3224000         | 3224000         | 3224900         |
| 024             | Motor cover           | 3242500         | 3243500         | 3243500         | 3243500         |
| 026             | External fan          | 3263100         | 3264000         | 3264000         | 3264000         |
| 027             | Retaining ring        | 3273100         | 3274000         | 3274000         | 3274000         |
| 029             | Fan cowl              | 3293900         | 3294400         | 3294400         | 3294400         |
| 030             | Gasket                | 3303900         | 3303900         | 3303900         | 3303900         |
| 031/032/033/034 | Silencer Assembly     | 3503900         | 3503900         | 3503900         | 3503900         |
| 031             | Silencer insert       | 3313900         | 3313900         | 3313900         | 3313900         |
| 032             | Silencer inlet filter | 3323900         | 3323900         | 3323900         | 3323900         |
| 033             | Silencer housing      | 3334400         | 3334400         | 3334400         | 3334400         |
| 034             | Silencer bolts        | 3344400         | 3344400         | 3344400         | 3344400         |
| 043             | Flange gasket         | 3434400         | 3434400         | 3434400         | 3434400         |
| 045             | Flange                | 3454400         | 3454400         | 3454400         | 3454400         |
| 054             | Terminal Block        | 3543106/3543112 | 3544006/3544012 | 3544006/3544012 | 3544006/3544012 |

## HRC-1020/1040/1060

| Position No.    | Description           | HRC1020         | HRC1040         | HRC1060         |
|-----------------|-----------------------|-----------------|-----------------|-----------------|
| 003             | Front Cover           | 3033900         | 3033900         | 3033900         |
| 007             | Front bearing         | 3073900         | 3073900         | 3073900         |
| 008             | Bearing cover         | 3083900         | 3083900         | 3083900         |
| 009             | O-Ring                | 3093900         | 3093900         | 3093900         |
| 010             | Impeller              | 3104400         | 3104400         | 3104400         |
| 013             | Housing               | 3134400         | 3134400         | 3134400         |
| 015             | Shaft lip seal        | 3154400         | 3154400         | 3154400         |
| 017             | Junction box cover    | 3173100         | 3174000         | 3174000         |
| 018             | Junction box gasket   | 3183100         | 3184000         | 3184000         |
| 019             | Key                   | 3193900         | 3193900         | 3193900         |
| 021             | Rotor                 | 3214400         | 3214500         | 3214600         |
| 022             | Rear bearing          | 3223100         | 3224000         | 3224000         |
| 024             | Motor cover           | 3242500         | 3243500         | 3243500         |
| 026             | External fan          | 3263100         | 3264000         | 3264000         |
| 027             | Retaining ring        | 3273100         | 3274000         | 3274000         |
| 029             | Fan cowl              | 3293900         | 3294400         | 3294400         |
| 030             | Gasket                | 3303900         | 3303900         | 3303900         |
| 031/032/033/034 | Silencer Assembly     | 3503900         | 3503900         | 3503900         |
| 031             | Silencer insert       | 3313900         | 3313900         | 3313900         |
| 032             | Silencer inlet filter | 3323900         | 3323900         | 3323900         |
| 033             | Silencer housing      | 3334400         | 3334400         | 3334400         |
| 034             | Silencer bolts        | 3344400         | 3344400         | 3344400         |
| 043             | Flange gasket         | 3434400         | 3434400         | 3434400         |
| 045             | Flange                | 3454400         | 3454400         | 3454400         |
| 054             | Terminal Block        | 3543106/3543112 | 3544006/3544012 | 3544006/3544012 |






## HRC-1100/1200/1300

| Position No.    | Description           | HRC1100         | HRC1200         | HRC1300         |
|-----------------|-----------------------|-----------------|-----------------|-----------------|
| 003             | Front Cover           | 3034800         | 3034800         | 3034800         |
| 007             | Front bearing         | 3074800         | 3074800         | 3074800         |
| 008             | Bearing cover         | 3084800         | 3084800         | 3084800         |
| 009             | O-Ring                | 3093900         | 3093900         | 3093900         |
| 010             | Impeller              | 3104800         | 3104800         | 3104800         |
| 013             | Housing               | 3134800         | 3134800         | 3134800         |
| 015             | Shaft lip seal        | 3154800         | 3154800         | 3154800         |
| 017             | Junction box cover    | 3174000         | 3174900         | 3174900         |
| 018             | Junction box gasket   | 3184000         | 3184900         | 3184900         |
| 019             | Key                   | 3194800         | 3194800         | 3194800         |
| 021             | Rotor                 | 3214800         | 3214900         | 3215000         |
| 022             | Rear bearing          | 3224000         | 3224900         | 3224900         |
| 024             | Motor cover           | 3243500         | 3244200         | 3244200         |
| 026             | External fan          | 3264000         | 3264900         | 3264900         |
| 027             | Retaining ring        | 3274000         | 3274900         | 3274900         |
| 029             | Fan cowl              | 3294400         | 3294800         | 3294800         |
| 030             | Gasket                | 3304900         | 3304900         | 3304900         |
| 031/032/033/034 | Silencer Assembly     | 3504800         | 3504800         | 3504800         |
| 031             | Silencer insert       | 3314800         | 3314800         | 3314800         |
| 032             | Silencer inlet filter | 3324800         | 3324800         | 3324800         |
| 033             | Silencer housing      | 3334800         | 3334800         | 3334800         |
| 034             | Silencer bolts        | 3344800         | 3344800         | 3344800         |
| 043             | Flange gasket         | 3434800         | 3434800         | 3434800         |
| 045             | Flange                | 3454800         | 3454800         | 3454800         |
| 054             | Terminal Block        | 3544006/3544012 | 3544006/3544012 | 3544006/3544012 |

# Republic Regenerative Blower

## Exploded View Double Stage Blowers

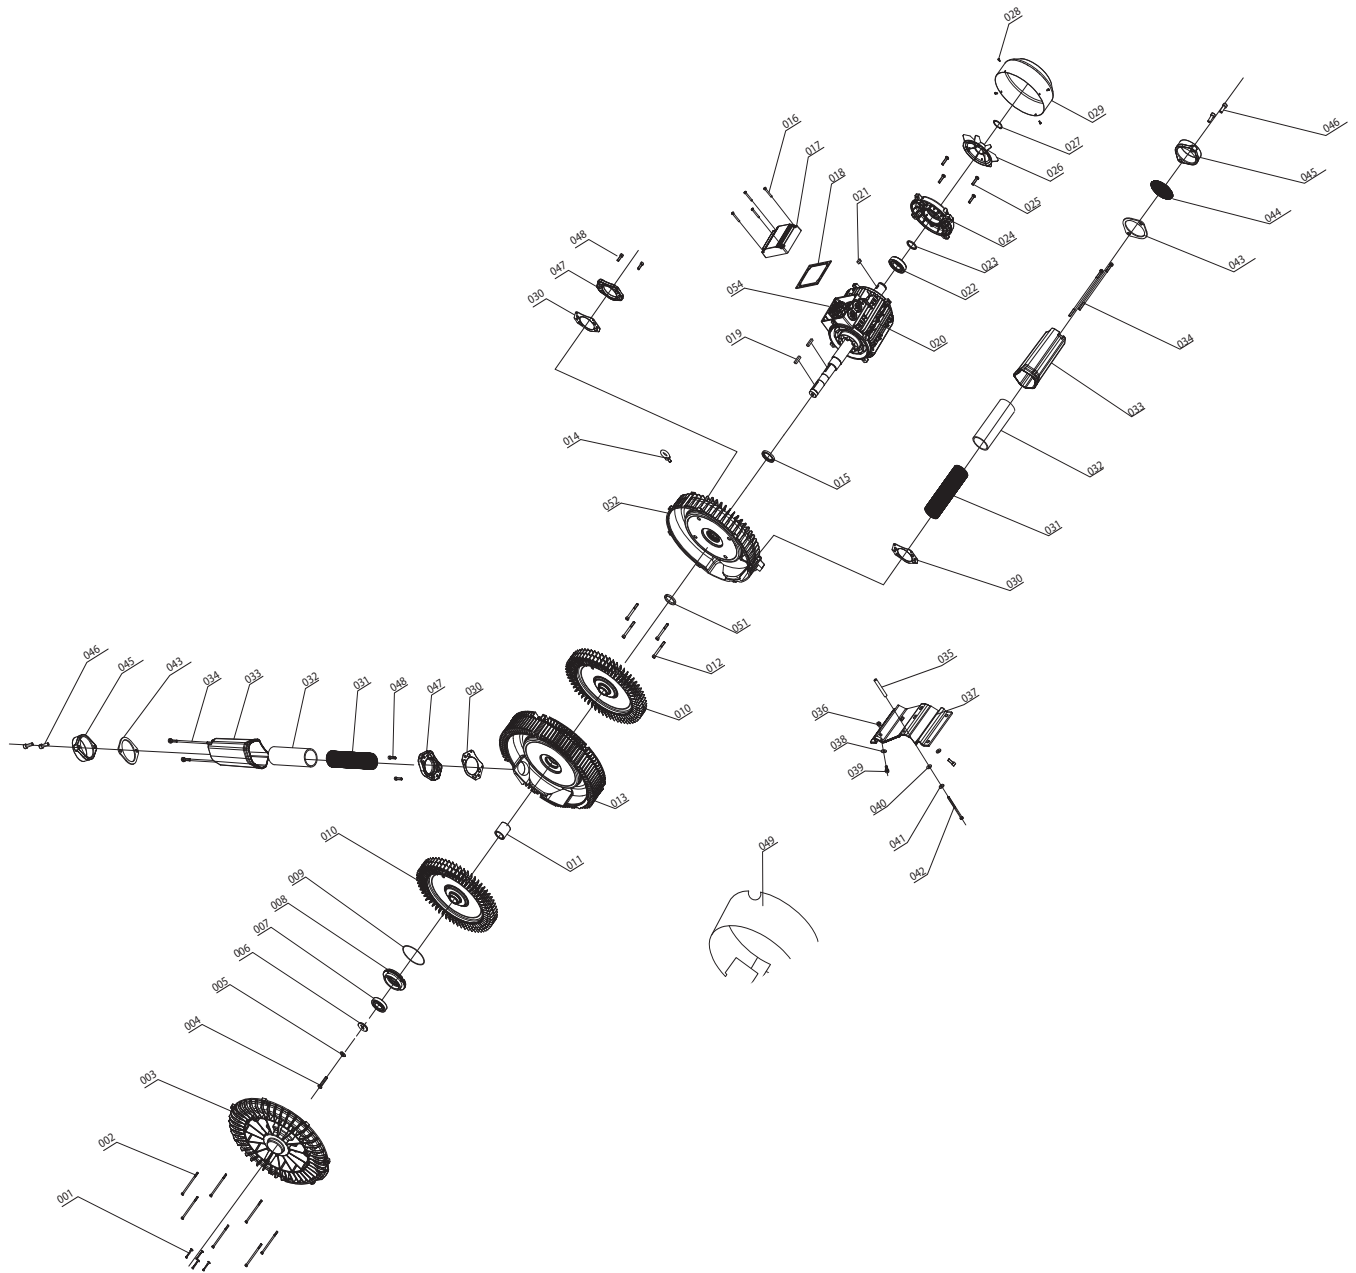



## 4RC-220

| Position No.    | Description           | 4RC220-H26      | 4RC220-H56      | 4RC220-A75       |
|-----------------|-----------------------|-----------------|-----------------|------------------|
| 003             | Front Cover           | 3035700         | 3035700         | 3035700          |
| 007             | Front bearing         | 3071800         | 3071800         | 3071800          |
| 008             | Bearing cover         | 3081800         | 3081800         | 3081800          |
| 009             | O-Ring                | 3095700         | 3095700         | 3095700          |
| 010             | Impeller              | 3105700         | 3105700         | 3105700          |
| 013             | Housing               | 3135900         | 3135900         | 3135900          |
| 015             | Shaft lip seal        | 3152000         | 3152000         | 3152000          |
| 017             | Junction box cover    | 3170100         | 3170100         | 3170100          |
| 018             | Junction box gasket   | 3180100         | 3180100         | 3180100          |
| 019             | Key                   | 3191800         | 3191800         | 3191800          |
| 021             | Rotor                 | 3215900         | 3216000         | 3216100          |
| 022             | Rear bearing          | 3220100         | 3226000         | 3222100          |
| 024             | Motor cover           | 3240900         | 3241800         | 3241800          |
| 026             | External fan          | 3260100         | 3261800         | 3261800          |
| 027             | Retaining ring        | 3270900         | 3271500         | 3271500          |
| 029             | Fan cowl              | 3290900         | 3291800         | 3291800          |
| 030             | Gasket                | 3300100         | 3301000         | 3300100          |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         | 3500100          |
| 031             | Silencer insert       | 3310100         | 3310100         | 3310100          |
| 032             | Silencer inlet filter | 3320100         | 3320100         | 3320100          |
| 033             | Silencer housing      | 3330100         | 3330100         | 3330100          |
| 034             | Silencer bolts        | 3340100         | 3340100         | 3340100          |
| 043             | Flange gasket         | 3430100         | 3430100         | 3430100          |
| 045             | Flange                | 3450100         | 3450100         | 3450100          |
| 049             | Shroud                | 3495700         | 3495700         | 3495700          |
| 051             | Seal                  | 3515700         | 3515700         | 3515700          |
| 052             | Channel               | 3525900         | 3525900         | 3525900          |
| 053             | Capacitor             | N/A             | N/A             | Contact Republic |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112 | 3540106/3540112  |

## 4RC-320

| Position No.    | Description           | 4RC320-H46      | 4RC320-H56      | 4RC320-A75       |
|-----------------|-----------------------|-----------------|-----------------|------------------|
| 003             | Front Cover           | 3036200         | 3036200         | 3036200          |
| 007             | Front bearing         | 3071800         | 3071800         | 3071800          |
| 008             | Bearing cover         | 3081800         | 3081800         | 3081800          |
| 009             | O-Ring                | 3095700         | 3095700         | 3095700          |
| 010             | Impeller              | 3106200         | 3106200         | 3106200          |
| 013             | Housing               | 3136500         | 3136500         | 3136500          |
| 015             | Shaft lip seal        | 3152000         | 3152000         | 3152000          |
| 017             | Junction box cover    | 3170100         | 3170100         | 3170100          |
| 018             | Junction box gasket   | 3180100         | 3180100         | 3180100          |
| 019             | Key                   | 3191800         | 3191800         | 3191800          |
| 021             | Rotor                 | 3216500         | 3216600         | 3216700          |
| 022             | Rear bearing          | 3226000         | 3226000         | 3222100          |
| 024             | Motor cover           | 3240900         | 3241800         | 3241800          |
| 026             | External fan          | 3260900         | 3261800         | 3261800          |
| 027             | Retaining ring        | 3270900         | 3271500         | 3271500          |
| 029             | Fan cowl              | 3290900         | 3291800         | 3291800          |
| 030             | Gasket                | 3300100         | 3300100         | 3300100          |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         | 3500100          |
| 031             | Silencer insert       | 3310100         | 3310100         | 3310100          |
| 032             | Silencer inlet filter | 3320100         | 3320100         | 3320100          |
| 033             | Silencer housing      | 3330100         | 3330100         | 3330100          |
| 034             | Silencer bolts        | 3340100         | 3340100         | 3340100          |
| 043             | Flange gasket         | 3430100         | 3430100         | 3430100          |
| 045             | Flange                | 3450100         | 3450100         | 3450100          |
| 049             | Shroud                | 3496200         | 3496200         | 3496200          |
| 051             | Seal                  | 3516200         | 3516200         | 3516200          |
| 052             | Channel               | 3526500         | 3526500         | 3526500          |
| 053             | Capacitor             | N/A             | N/A             | Contact Republic |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112 | 3540106/3540112  |



## 4RC-420

| Position No.    | Description           | 4RC420-H26      | 4RC420-H56      |
|-----------------|-----------------------|-----------------|-----------------|
| 003             | Front Cover           | 3036800         | 3036800         |
| 007             | Front bearing         | 3071800         | 3071800         |
| 008             | Bearing cover         | 3081800         | 3081800         |
| 009             | O-Ring                | 3095700         | 3095700         |
| 010             | Impeller              | 3106800         | 3106800         |
| 013             | Housing               | 3137000         | 3137000         |
| 015             | Shaft lip seal        | 3152000         | 3152000         |
| 017             | Junction box cover    | 3170100         | 3170100         |
| 018             | Junction box gasket   | 3180100         | 3180100         |
| 019             | Key                   | 3191800         | 3191800         |
| 021             | Rotor                 | 3217000         | 3217100         |
| 022             | Rear bearing          | 3226000         | 3222100         |
| 024             | Motor cover           | 3241800         | 3242500         |
| 026             | External fan          | 3261800         | 3263100         |
| 027             | Retaining ring        | 3271500         | 3273100         |
| 029             | Fan cowl              | 3291800         | 3292400         |
| 030             | Gasket                | 3300100         | 3300100         |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         |
| 031             | Silencer insert       | 3310100         | 3310100         |
| 032             | Silencer inlet filter | 3320100         | 3320100         |
| 033             | Silencer housing      | 3330100         | 3330100         |
| 034             | Silencer bolts        | 3340100         | 3340100         |
| 043             | Flange gasket         | 3430100         | 3430100         |
| 045             | Flange                | 3450100         | 3450100         |
| 049             | Shroud                | 3496800         | 3496800         |
| 051             | Seal                  | 3516800         | 3516800         |
| 052             | Channel               | 3527000         | 3527000         |
| 054             | Terminal Block        | 3540106/3540112 | 3543106/3543112 |

## 4RC-520

| Position No.    | Description           | 4RC520-H26      | 4RC520-H77      |
|-----------------|-----------------------|-----------------|-----------------|
| 003             | Front Cover           | 3037200         | 3037200         |
| 007             | Front bearing         | 3072900         | 3072900         |
| 008             | Bearing cover         | 3082900         | 3082900         |
| 009             | O-Ring                | 3092900         | 3092900         |
| 010             | Impeller              | 3107200         | 3107200         |
| 013             | Housing               | 3137400         | 3137400         |
| 015             | Shaft lip seal        | 3157600         | 3157600         |
| 017             | Junction box cover    | 3170100         | 3173100         |
| 018             | Junction box gasket   | 3180100         | 3183100         |
| 019             | Key                   | 3192900         | 3192900         |
| 021             | Rotor                 | 3217400         | 3217500         |
| 022             | Rear bearing          | 3226000         | 3223100         |
| 024             | Motor cover           | 3241800         | 3242500         |
| 026             | External fan          | 3261800         | 3263100         |
| 027             | Retaining ring        | 3271500         | 3273100         |
| 029             | Fan cowl              | 3292400         | 3292900         |
| 030             | Gasket                | 3300100         | 3300100         |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         |
| 031             | Silencer insert       | 3310100         | 3310100         |
| 032             | Silencer inlet filter | 3320100         | 3320100         |
| 033             | Silencer housing      | 3330100         | 3330100         |
| 034             | Silencer bolts        | 3340100         | 3340100         |
| 043             | Flange gasket         | 3430100         | 3430100         |
| 045             | Flange                | 3450100         | 3450100         |
| 049             | Shroud                | 3497200         | 3497200         |
| 051             | Seal                  | 3517200         | 3517200         |
| 052             | Channel               | 3527400         | 3527400         |
| 054             | Terminal Block        | 3540106/3540112 | 3543106/3543112 |



## 4RC-620

| Position No.    | Description           | 4RC620-H36      | 4RC620-H57      |
|-----------------|-----------------------|-----------------|-----------------|
| 003             | Front Cover           | 3037600         | 3037600         |
| 007             | Front bearing         | 3072900         | 3072900         |
| 008             | Bearing cover         | 3082900         | 3082900         |
| 009             | O-Ring                | 3092900         | 3092900         |
| 010             | Impeller              | 3107600         | 3107600         |
| 013             | Housing               | 3137800         | 3137800         |
| 015             | Shaft lip seal        | 3157600         | 3157600         |
| 017             | Junction box cover    | 3170100         | 3174000         |
| 018             | Junction box gasket   | 3180100         | 3184000         |
| 019             | Key                   | 3192900         | 3192900         |
| 021             | Rotor                 | 3217800         | 3217900         |
| 022             | Rear bearing          | 3222100         | 3224000         |
| 024             | Motor cover           | 3242500         | 3243500         |
| 026             | External fan          | 3263100         | 3264000         |
| 027             | Retaining ring        | 3273100         | 3274000         |
| 029             | Fan cowl              | 3292400         | 3294400         |
| 030             | Gasket                | 3300100         | 3300100         |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         |
| 031             | Silencer insert       | 3310100         | 3310100         |
| 032             | Silencer inlet filter | 3320100         | 3320100         |
| 033             | Silencer housing      | 3330100         | 3330100         |
| 034             | Silencer bolts        | 3340100         | 3340100         |
| 043             | Flange gasket         | 3430100         | 3430100         |
| 045             | Flange                | 3450100         | 3450100         |
| 049             | Shroud                | 3497600         | 3497600         |
| 051             | Seal                  | 3517600         | 3517600         |
| 052             | Channel               | 3527800         | 3527800         |
| 054             | Terminal Block        | 3543106/3543112 | 3544006/3544012 |

## 4RC-430

| Position No.    | Description           | 4RC630-H67      |
|-----------------|-----------------------|-----------------|
| 003             | Front Cover           | 3037600         |
| 007             | Front bearing         | 3072900         |
| 008             | Bearing cover         | 3082900         |
| 009             | O-Ring                | 3092900         |
| 010             | Impeller              | 3108000         |
| 013             | Housing               | 3138000         |
| 015             | Shaft lip seal        | 3157600         |
| 017             | Junction box cover    | 3174000         |
| 018             | Junction box gasket   | 3184000         |
| 019             | Key                   | 3192900         |
| 021             | Rotor                 | 3218000         |
| 022             | Rear bearing          | 3224000         |
| 024             | Motor cover           | 3243500         |
| 026             | External fan          | 3264000         |
| 027             | Retaining ring        | 3274000         |
| 029             | Fan cowl              | 3294400         |
| 030             | Gasket                | 3300100         |
| 031/032/033/034 | Silencer Assembly     | 3500100         |
| 031             | Silencer insert       | 3310100         |
| 032             | Silencer inlet filter | 3320100         |
| 033             | Silencer housing      | 3330100         |
| 034             | Silencer bolts        | 3340100         |
| 043             | Flange gasket         | 3430100         |
| 045             | Flange                | 3450100         |
| 049             | Shroud                | 3497600         |
| 051             | Seal                  | 3518000         |
| 052             | Channel               | 3528000         |
| 054             | Terminal Block        | 3544006/3544012 |





## HRC-202/202-1

| Position No.    | Description           | HRC202          | HRC202/1        |
|-----------------|-----------------------|-----------------|-----------------|
| 003             | Front Cover           | 3030500         | 3030500         |
| 007             | Front bearing         | 3070100         | 3070100         |
| 008             | Bearing cover         | 3080100         | 3080100         |
| 009             | O-Ring                | N/A             | N/A             |
| 010             | Impeller              | 3100100         | 3100100         |
| 013             | Housing               | 3130500         | 3130500         |
| 015             | Shaft lip seal        | 3150100         | 3150100         |
| 017             | Junction box cover    | 3170100         | 3170100         |
| 018             | Junction box gasket   | 3180100         | 3180100         |
| 019             | Key                   | 3190100         | 3190100         |
| 021             | Rotor                 | 3210500         | 3210600         |
| 022             | Rear bearing          | 3220100         | 3220100         |
| 024             | Motor cover           | 3240100         | 3240600         |
| 026             | External fan          | 3260100         | 3260100         |
| 027             | Retaining ring        | 3270100         | 3270600         |
| 029             | Fan cowl              | 3290100         | 3290100         |
| 030             | Gasket                | 3300100         | 3300100         |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100         |
| 031             | Silencer insert       | 3310100         | 3310100         |
| 032             | Silencer inlet filter | 3320100         | 3320100         |
| 033             | Silencer housing      | 3330100         | 3330100         |
| 034             | Silencer bolts        | 3340100         | 3340100         |
| 043             | Flange gasket         | 3430100         | 3430100         |
| 045             | Flange                | 3450100         | 3450100         |
| 049             | Shroud                | 3490500         | 3490500         |
| 051             | Seal                  | 3510100         | 3510100         |
| 052             | Channel               | 3520500         | 3520500         |
| 053             | Capacitor             | N/A             | 3531200         |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112 |

## HRC-302/302-1

| Position No.    | Description           | HRC302          | HRC302/1         |
|-----------------|-----------------------|-----------------|------------------|
| 003             | Front Cover           | 3030900         | 3030900          |
| 007             | Front bearing         | 3070100         | 3070100          |
| 008             | Bearing cover         | 3080100         | 3080100          |
| 009             | O-Ring                | N/A             | N/A              |
| 010             | Impeller              | 3100100         | 3100100          |
| 013             | Housing               | 3130900         | 3130900          |
| 015             | Shaft lip seal        | 3150100         | 3150100          |
| 017             | Junction box cover    | 3170100         | 3170100          |
| 018             | Junction box gasket   | 3180100         | 3180100          |
| 019             | Key                   | 3190100         | 3190100          |
| 021             | Rotor                 | 3210900         | 3211000          |
| 022             | Rear bearing          | 3221800         | 3221800          |
| 024             | Motor cover           | 3240900         | 3240900          |
| 026             | External fan          | 3260900         | 3260900          |
| 027             | Retaining ring        | 3270900         | 3270900          |
| 029             | Fan cowl              | 3290900         | 3290900          |
| 030             | Gasket                | 3300100         | 3300100          |
| 031/032/033/034 | Silencer Assembly     | 3500100         | 3500100          |
| 031             | Silencer insert       | 3310100         | 3310100          |
| 032             | Silencer inlet filter | 3320100         | 3320100          |
| 033             | Silencer housing      | 3330100         | 3330100          |
| 034             | Silencer bolts        | 3340100         | 3340100          |
| 043             | Flange gasket         | 3430100         | 3430100          |
| 045             | Flange                | 3450100         | 3450100          |
| 049             | Shroud                | 3490900         | 3490900          |
| 051             | Seal                  | 3510100         | 3510100          |
| 052             | Channel               | 3520900         | 3520900          |
| 053             | Capacitor             | N/A             | Contact Republic |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112  |




## HRC-402S/402/402-1

| Position No.    | Description           | HRC402S         | HRC402          | HRC402/1         |
|-----------------|-----------------------|-----------------|-----------------|------------------|
| 003             | Front Cover           | 3031600         | 3031600         | 3031600          |
| 007             | Front bearing         | 3071100         | 3071100         | 3071100          |
| 008             | Bearing cover         | 3081100         | 3081100         | 3081100          |
| 009             | O-Ring                | N/A             | N/A             | N/A              |
| 010             | Impeller              | 3101500         | 3101100         | 3101100          |
| 013             | Housing               | 3131600         | 3131600         | 3131600          |
| 015             | Shaft lip seal        | 3151100         | 3151100         | 3151100          |
| 017             | Junction box cover    | 3170100         | 3170100         | 3170100          |
| 018             | Junction box gasket   | 3180100         | 3180100         | 3180100          |
| 019             | Key                   | 3191100         | 3191100         | 3191100          |
| 021             | Rotor                 | 3211500         | 3211600         | 3211700          |
| 022             | Rear bearing          | 3221800         | 3221800         | 3222100          |
| 024             | Motor cover           | 3241800         | 3241800         | 3241800          |
| 026             | External fan          | 3261800         | 3261800         | 3261800          |
| 027             | Retaining ring        | 3271500         | 3271500         | 3271500          |
| 029             | Fan cowl              | 3291800         | 3292400         | 3292400          |
| 030             | Gasket                | 3301100         | 3301100         | 3301100          |
| 031/032/033/034 | Silencer Assembly     | 3501100         | 3501100         | 3501100          |
| 031             | Silencer insert       | 3311100         | 3311100         | 3311100          |
| 032             | Silencer inlet filter | 3321100         | 3321100         | 3321100          |
| 033             | Silencer housing      | 3331100         | 3331100         | 3331100          |
| 034             | Silencer bolts        | 3341100         | 3341100         | 3341100          |
| 043             | Flange gasket         | 3431100         | 3431100         | 3431100          |
| 045             | Flange                | 3451100         | 3451100         | 3451100          |
| 049             | Shroud                | 3491600         | 3491600         | 3491600          |
| 051             | Seal                  | 3511500         | 3511100         | 3511100          |
| 052             | Channel               | 3521600         | 3521600         | 3521600          |
| 053             | Capacitor             | N/A             | N/A             | Contact Republic |
| 054             | Terminal Block        | 3540106/3540112 | 3540106/3540112 | 3540106/3540112  |

## HRC-502/602/702

| Position No.    | Description           | HRC502          | HRC602          | HRC702          |
|-----------------|-----------------------|-----------------|-----------------|-----------------|
| 003             | Front Cover           | 3032400         | 3032400         | 3032400         |
| 007             | Front bearing         | 3071800         | 3071800         | 3071800         |
| 008             | Bearing cover         | 3081800         | 3081800         | 3081800         |
| 009             | O-Ring                | N/A             | N/A             | N/A             |
| 010             | Impeller              | 3101800         | 3101800         | 3101800         |
| 013             | Housing               | 3132400         | 3132400         | 3132400         |
| 015             | Shaft lip seal        | 3151800         | 3152000         | 3152000         |
| 017             | Junction box cover    | 3170100         | 3173100         | 3173100         |
| 018             | Junction box gasket   | 3183100         | 3183100         | 3183100         |
| 019             | Key                   | 3191800         | 3191800         | 3191800         |
| 021             | Rotor                 | 3212400         | 3212500         | 3212600         |
| 022             | Rear bearing          | 3221800         | 3223100         | 3223100         |
| 024             | Motor cover           | 3241800         | 3242500         | 3242500         |
| 026             | External fan          | 3261800         | 3263100         | 3263100         |
| 027             | Retaining ring        | 3271500         | 3273100         | 3273100         |
| 029             | Fan cowl              | 3292400         | 3292900         | 3292900         |
| 030             | Gasket                | 3301800         | 3301800         | 3301800         |
| 031/032/033/034 | Silencer Assembly     | 3501800         | 3501800         | 3501800         |
| 031             | Silencer insert       | 3311800         | 3311800         | 3311800         |
| 032             | Silencer inlet filter | 3321800         | 3321800         | 3321800         |
| 033             | Silencer housing      | 3331800         | 3331800         | 3331800         |
| 034             | Silencer bolts        | 3341800         | 3341800         | 3341800         |
| 043             | Flange gasket         | 3431800         | 3431800         | 3431800         |
| 045             | Flange                | 3451800         | 3451800         | 3451800         |
| 049             | Shroud                | 3492400         | 3492400         | 3492400         |
| 051             | Seal                  | 3512000         | 3512000         | 3512000         |
| 052             | Channel               | 3522400         | 3522400         | 3522400         |
| 054             | Terminal Block        | 3540106/3540112 | 3543106/3543112 | 3543106/3543112 |

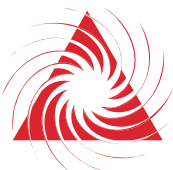


## HRC-802/902/1002

| Position No.    | Description           | HRC802          | HRC902          | HRC1002         |
|-----------------|-----------------------|-----------------|-----------------|-----------------|
| 003             | Front Cover           | 3033400         | 3033400         | 3033400         |
| 007             | Front bearing         | 3072900         | 3072900         | 3072900         |
| 008             | Bearing cover         | 3082900         | 3082900         | 3082900         |
| 009             | O-Ring                | 3092900         | 3092900         | 3092900         |
| 010             | Impeller              | 3102900         | 3102900         | 3102900         |
| 013             | Housing               | 3133400         | 3133400         | 3133400         |
| 015             | Shaft lip seal        | 3152000         | 3153400         | 3153400         |
| 017             | Junction box cover    | 3173100         | 3174000         | 3174000         |
| 018             | Junction box gasket   | 3183100         | 3184000         | 3184000         |
| 019             | Key                   | 3192900         | 3192900         | 3192900         |
| 021             | Rotor                 | 3213400         | 3213500         | 3213600         |
| 022             | Rear bearing          | 3223100         | 3224000         | 3224000         |
| 024             | Motor cover           | 3242500         | 3243500         | 3243500         |
| 026             | External fan          | 3263100         | 3264000         | 3264000         |
| 027             | Retaining ring        | 3273100         | 3274000         | 3274000         |
| 029             | Fan cowl              | 3293900         | 3294400         | 3294400         |
| 030             | Gasket                | 3301800         | 3301800         | 3301800         |
| 031/032/033/034 | Silencer Assembly     | 3501800         | 3501800         | 3501800         |
| 031             | Silencer insert       | 3311800         | 3311800         | 3311800         |
| 032             | Silencer inlet filter | 3321800         | 3321800         | 3321800         |
| 033             | Silencer housing      | 3331800         | 3331800         | 3331800         |
| 034             | Silencer bolts        | 3341800         | 3341800         | 3341800         |
| 043             | Flange gasket         | 3431800         | 3431800         | 3431800         |
| 045             | Flange                | 3451800         | 3451800         | 3451800         |
| 049             | Shroud                | 3493400         | 3493400         | 3493400         |
| 051             | Seal                  | 3513400         | 3513400         | 3513400         |
| 052             | Channel               | 3523400         | 3523400         | 3523400         |
| 054             | Terminal Block        | 3543106/3543112 | 3544006/3544012 | 3544006/3544012 |

## HRC-1102/1202

| Position No.    | Description           | HRC1102         | HRC1202         |
|-----------------|-----------------------|-----------------|-----------------|
| 003             | Front Cover           | 3034200         | 3034200         |
| 007             | Front bearing         | 3073900         | 3073900         |
| 008             | Bearing cover         | 3083900         | 3083900         |
| 009             | O-Ring                | 3093900         | 3093900         |
| 010             | Impeller              | 3103900         | 3103900         |
| 013             | Housing               | 3134200         | 3134200         |
| 015             | Shaft lip seal        | 3154400         | 3154400         |
| 017             | Junction box cover    | 3174900         | 3174900         |
| 018             | Junction box gasket   | 3184900         | 3184900         |
| 019             | Key                   | 3193900         | 3193900         |
| 021             | Rotor                 | 3214200         | 3214300         |
| 022             | Rear bearing          | 3224900         | 3224900         |
| 024             | Motor cover           | 3244200         | 3244200         |
| 026             | External fan          | 3264900         | 3264900         |
| 027             | Retaining ring        | 3274900         | 3274900         |
| 029             | Fan cowl              | 3294800         | 3294800         |
| 030             | Gasket                | 3303900         | 3303900         |
| 031/032/033/034 | Silencer Assembly     | 3503900         | 3503900         |
| 031             | Silencer insert       | 3313900         | 3313900         |
| 032             | Silencer inlet filter | 3323900         | 3323900         |
| 033             | Silencer housing      | 3334400         | 3334400         |
| 034             | Silencer bolts        | 3344400         | 3344400         |
| 043             | Flange gasket         | 3434400         | 3434400         |
| 045             | Flange                | 3454400         | 3454400         |
| 049             | Shroud                | 3494200         | 3494200         |
| 051             | Seal                  | 3514200         | 3514200         |
| 052             | Channel               | 3524200         | 3524200         |
| 054             | Terminal Block        | 3544006/3544012 | 3544006/3544012 |

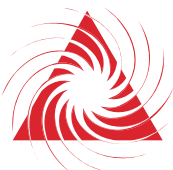


## HRC-1203/1402/1452/1502

| Position No.    | Description           | HRC1302         | HRC1402         | HRC1452         | HRC1502         |
|-----------------|-----------------------|-----------------|-----------------|-----------------|-----------------|
| 003             | Front Cover           | 3035100         | 3035100         | 3035100         | 3035100         |
| 007             | Front bearing         | 3074800         | 3074800         | 3074800         | 3074800         |
| 008             | Bearing cover         | 3084800         | 3084800         | 3084800         | 3084800         |
| 009             | O-Ring                | 3093900         | 3093900         | 3093900         | 3093900         |
| 010             | Impeller              | 3104800         | 3104800         | 3104800         | 3104800         |
| 013             | Housing               | 3135100         | 3135100         | 3135100         | 3135100         |
| 015             | Shaft lip seal        | 3154800         | 3154800         | 3154800         | 3154800         |
| 017             | Junction box cover    | 3174900         | 3174900         | 3174900         | 3174900         |
| 018             | Junction box gasket   | 3184900         | 3184900         | 3184900         | 3184900         |
| 019             | Key                   | 3194800         | 3194800         | 3194800         | 3194800         |
| 021             | Rotor                 | 3215100         | 3215200         | 3215300         | 3215400         |
| 022             | Rear bearing          | 3224900         | 3224900         | 3224900         | 3224900         |
| 024             | Motor cover           | 3244200         | 3244200         | 3244200         | 3244200         |
| 026             | External fan          | 3264900         | 3264900         | 3264900         | 3264900         |
| 027             | Retaining ring        | 3274900         | 3274900         | 3274900         | 3274900         |
| 029             | Fan cowl              | 3294800         | 3294800         | 3294800         | 3295100         |
| 030             | Gasket                | 3304900         | 3304900         | 3304900         | 3304900         |
| 031/032/033/034 | Silencer Assembly     | 3504800         | 3504800         | 3504800         | 3504800         |
| 031             | Silencer insert       | 3314800         | 3314800         | 3314800         | 3314800         |
| 032             | Silencer inlet filter | 3324800         | 3324800         | 3324800         | 3324800         |
| 033             | Silencer housing      | 3334800         | 3334800         | 3334800         | 3334800         |
| 034             | Silencer bolts        | 3344800         | 3344800         | 3344800         | 3344800         |
| 043             | Flange gasket         | 3434800         | 3434800         | 3434800         | 3434800         |
| 045             | Flange                | 3454800         | 3454800         | 3454800         | 3454800         |
| 049             | Shroud                | 3495100         | 3495100         | 3495100         | 3495100         |
| 051             | Seal                  | 3514800         | 3514800         | 3514800         | 3514800         |
| 052             | Channel               | 3525100         | 3525100         | 3525100         | 3525100         |
| 054             | Terminal Block        | 3544006/3544012 | 3544006/3544012 | 3544006/3544012 | 3544006/3544012 |



Air Knife Systems

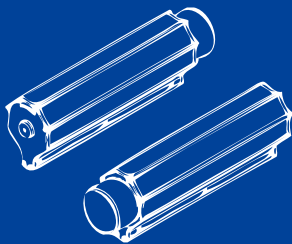

Centrifugal Blowers



Regenerative Blowers



Vacuum Pumps



5131 Cash Road, Dallas, TX 75247 | 800.847.0380 | [republic-mfg.com](http://republic-mfg.com)

